




MULTI TRAILER 4 PLUG BRACKET

TLR712701

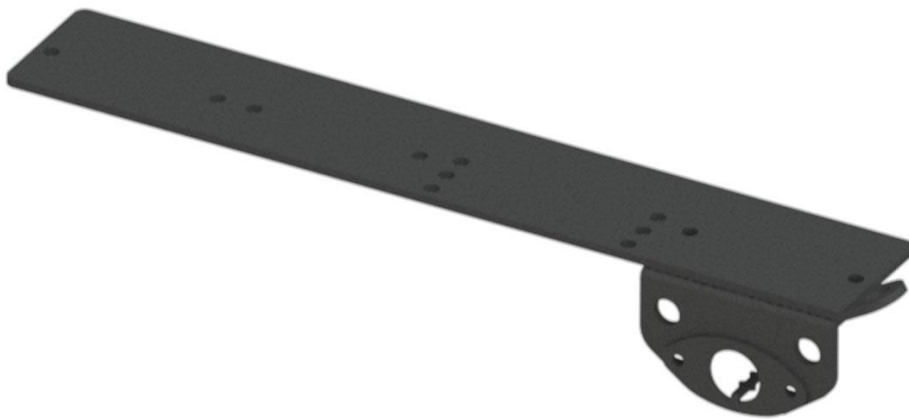

SUITED TO:

NISSAN PATROL Y62
RAM 1500 DT SERIES ASV
UNIVERSAL FITMENT



PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 30 minutes.



Allen Key, basic spanner and socket set

FITTING KIT	
QUANTITY	PART
1	TLR712701 – Multi Trailer Plug Bracket
1	TLR710009 - Camera Plug Bracket
1	TLR710008 - Adapter Plate
2	M4 x 10 mm SS Pan Phillips Head
2	M4 x 16 mm SS Pan Phillips Head
6	M4 x 20 mm SS Pan Phillips Head
10	M4 SS Nyloc Nut
1	Cable Tie 150 mm

NOTE:

This TLR Products Bracket allows for mounting 7/12 pin, 2 x Additional plugs or connections (Anderson plug, Camera plug, Air coupling), airbags, trailer break away.

We recommend doing all the wiring before mounting bracket to the vehicle.



PHOTO 1



FITTING INSTRUCTIONS

1. Decide which plugs will be fitted and which holes in the bracket will be used.
2. Remove the factory 7/12 pin plug from OEM mounting bracket.
3. Mount required accessories/plugs to the TLR Products Bracket
4. Fit camera connector to adaptor plate using a cable tie or use the bolts supplied with your camera kit. **Photo 1**
5. Fit the TLR Products Bracket to the OEM trailer plug mounting plate using 2 x M4 bolts and nyloc nuts supplied. Refer to **Photo 3 & 4** for example.



PHOTO 2

Nissan Patrol Y62 OEM towbar

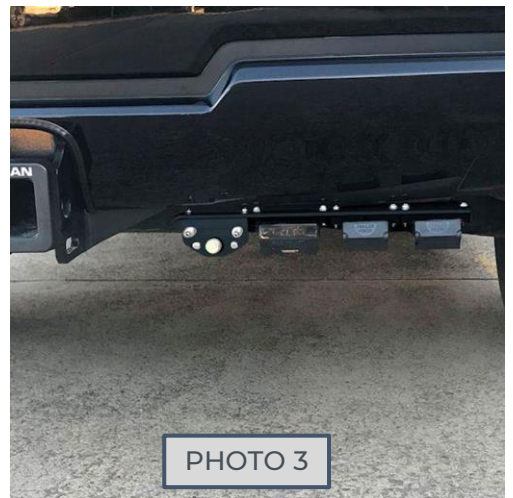


PHOTO 3

RAM 1500 DT ASV towbar



PHOTO 4



TLR Products
65 Northville Drive
Barnsley NSW 2278



[instagram.com/tlrproducts](https://www.instagram.com/tlrproducts)
[facebook.com/tlrproducts](https://www.facebook.com/tlrproducts)



hello@tlrproducts.com.au
www.tlrproducts.com.au