


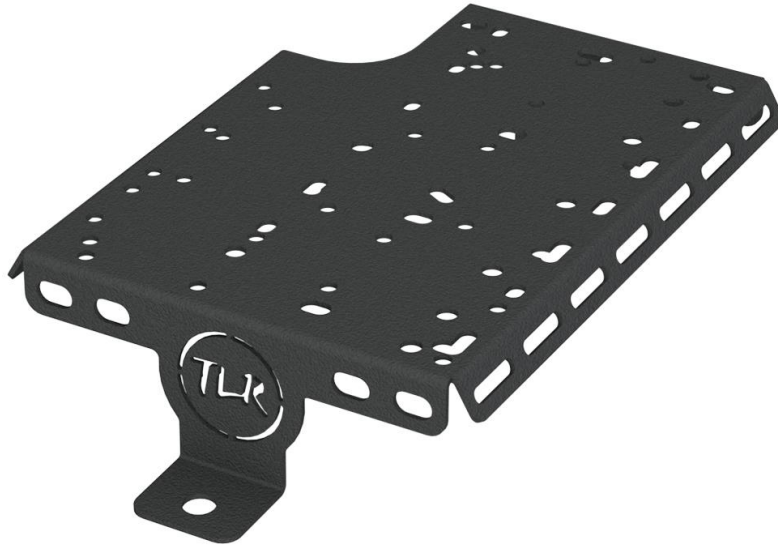

ELECTRICAL ACCESSORY BRACKET

TLR811401



SUITED TO:

TOYOTA HILUX N80 SERIES



PRE-INSTALLATION



Read through this installation guide before proceeding.




Fitting time is approx. 20 minutes.



Spanner
Socket Set
Phillips head
screwdriver

FITTING KIT

QUANTITY	PART
1	TLR811401 – Electrical Accessory Bracket

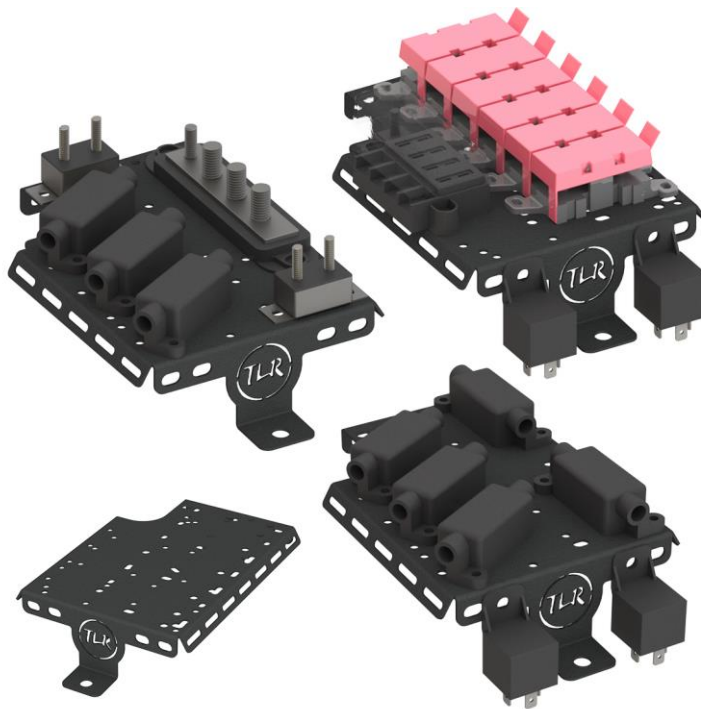

NOTE:



This TLR Products bracket is designed to suit a Toyota Hilux N80 series OEM battery location and mounts on top of the battery using the OEM hardware.

The bracket provides mounting hole locations for several midi fuse holders, circuit breakers, buzz bars and relays in various orientations.



FITTING INSTRUCTIONS

1. Decide on which components and orientation you will use and assemble components onto TLR Products Bracket.
NOTE: Double check clearances before connecting power and tightening fixings.
2. Remove OEM Nuts holding the OEM battery clamp down. See **Photo 1**.
3. Place TLR Products bracket over the top of the OEM battery clamp and install previously removed Nuts to secure back in place.

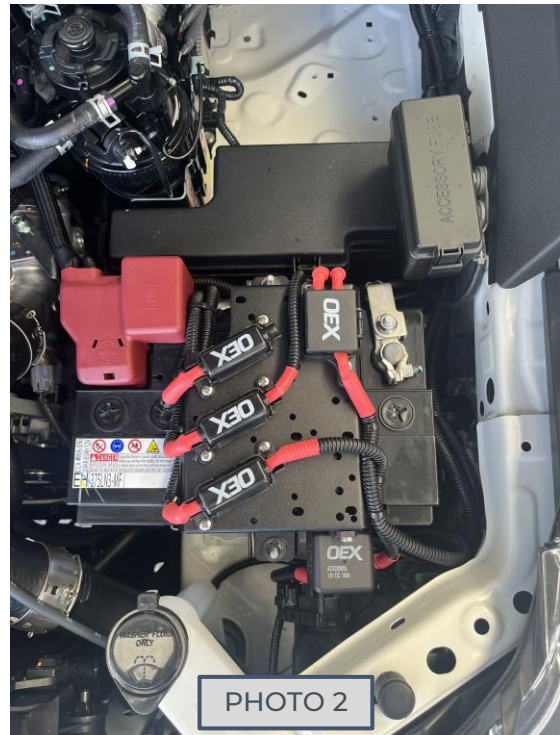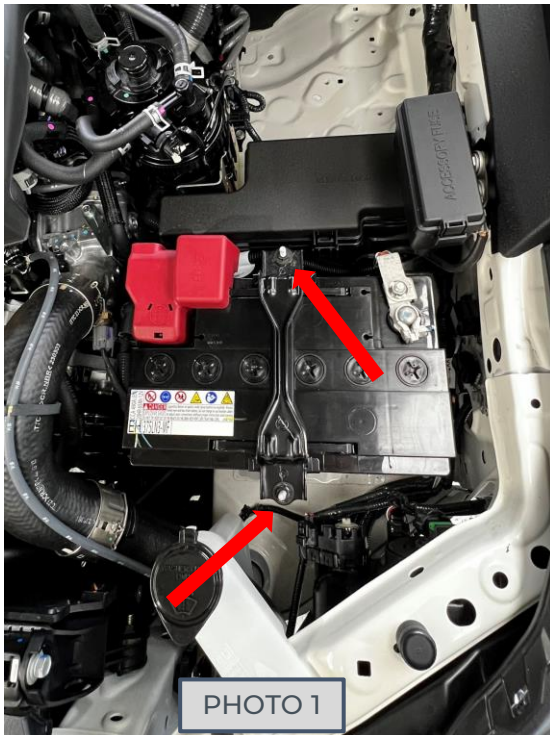

[instagram.com/tlrproducts](https://www.instagram.com/tlrproducts)
[facebook.com/tlrproducts](https://www.facebook.com/tlrproducts)



hello@tlrproducts.com.au
www.tlrproducts.com.au



TLR Products
65 Northville Drive
Barnsley NSW 2278