




---

# MOLLE PANEL REAR SIDE WINDOWS

---

TLR982401

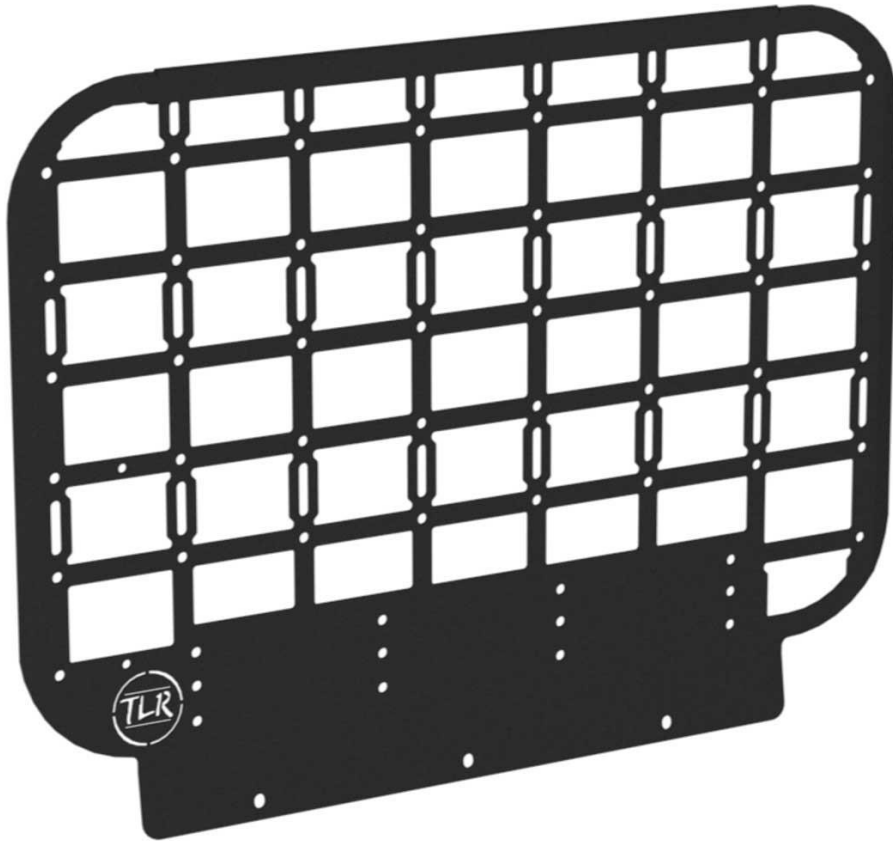

SUITED TO:

**SUZUKI JIMNY JB74**



## PRE-INSTALLATION



Read through this installation guide before proceeding.




Fitting time is approx. 30 minutes.



Allen key set  
Socket set  
Nut riveter

### FITTING KIT

QUANTITY	PART
1	TLR982401-1 Left Rear Side Window Molle Panel
1	TLR982401-2 Right Rear Side Window Molle Panel
6	M5 x 19 mm x 4.5 mm Rubber Washer
12	M6 x 20mm SS Button Head Socket
12	M6 x 12 mm SS Flat Washer
6	M6 Nut-Sert
1	120 mm of 12 mm Hose (Drill Stopper)

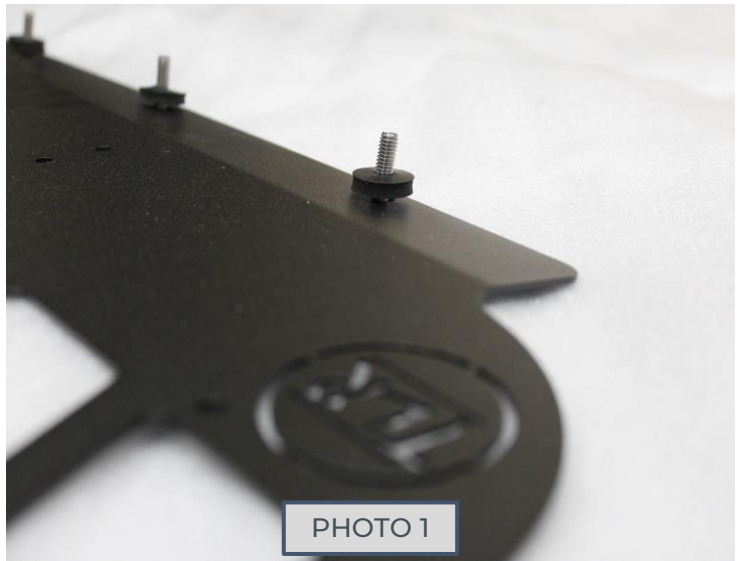

#### NOTE:

Window Molle Panels help utilise the space of your side windows

Weight Limit: 5kgs




## FITTING INSTRUCTIONS

1. Place a drop sheet across the back to protect the interior and catch any drill shavings from going down between the sheets.
2. Remove the three middle plugs from captive nuts along bottom edge of window frames.
3. Choose the correct panel for a side.
4. As per **photo 1** fit three M6 x 20 mm bolts on one side and rubber washers on backside of panel.
5. Fit panel to window, check panel parallel along top edge and temporarily tighten all three bolts.
6. Mark three top holes with correct size drill bit for the inserts and remove panel from window.
7. Drill all 9.5 mm holes rust protect and insert nutserts.  
*Note: check drill size compared with Nutserts supplied*
8. Refit panel and tighten all bolts.
9. Vacuum all metal shavings from vehicle.

These side panels have been designed with the side curtain airbags in mind and is not in the inflation zone.

Caution should be used when mounting items to the top half of the panels, it is recommend items no thicker than 20 mm be mounted in the top quarter of the panel and no more than 50 mm thick items in the 2nd quarter from the top.

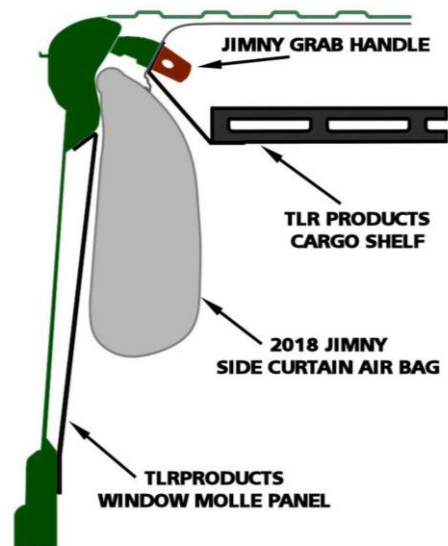

hello@tlrproducts.com.au  
www.tlrproducts.com.au



instagram.com/tlrproducts  
facebook.com/tlrproducts