




MULTI TRAILER 3 PLUG BRACKET

TLR711201

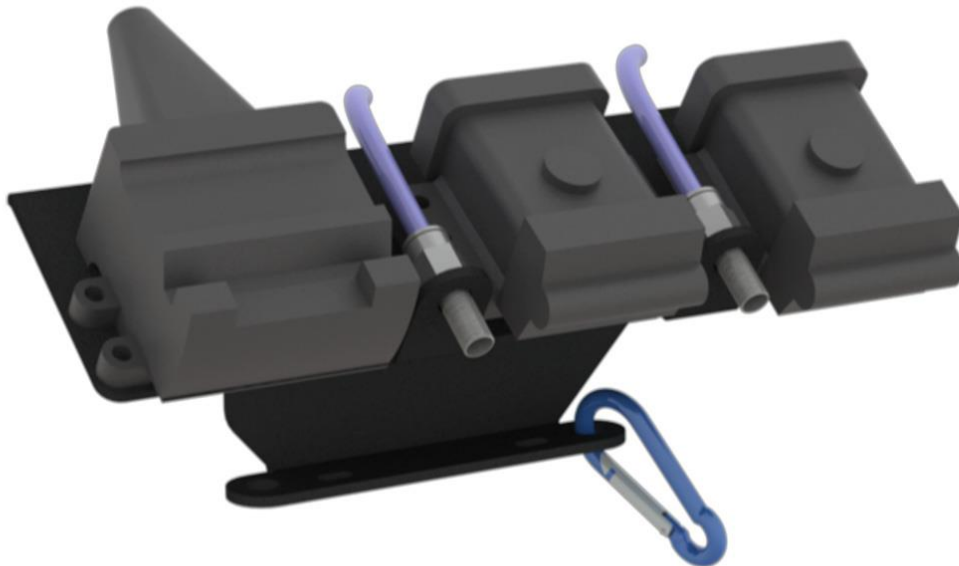

SUITED TO:

**TOYOTA LANDCRUISER 76 SERIES/ 78 SERIES
79 SERIES (DUAL CAB UP TO MY22)**



PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 30 minutes.



Allen key set
Spanner
Socket Set

FITTING KIT

QUANTITY	PART
1	TLR711201 – Multi Trailer Plug Bracket
1	TLR710007 – Camera Plug Bracket
1	TLR710008 - Plate Adapter
2	M4 x 16 mm SS Phillip Pan Head
4	M4 x 20 mm SS Phillip Pan Head
2	M4 x 10 mm SS Phillip Pan Head
8	M4 SS Nyloc Nut
2	M5 x 16 mm SS Phillip Pan Head
2	M5 SS Nyloc Nut
1	Cable Tie 150 mm

NOTE:

Suits OEM 3.5T towbar made from 100 mm RHS **P/N PZQ64-60190**

This TLR Products bracket allows for mounting 7/12 pin, 2 x Additional plugs or connections (Anderson plug, Camera plug, Air coupling), airbags, trailer break away.

We recommend doing all the wiring before mounting bracket to the vehicle.



PHOTO 1



FITTING INSTRUCTIONS

1. Decide which plugs, fittings and orientation you will use.
2. Remove the factory trailer plug bracket from rear of vehicle. Remove the factory 7/12 pin plug from bracket. **Photo 2.**
3. If fitting a reversing camera plug use supplied additional bracket. If you are using a Safety Dave style camera plug, fit connector to adaptor plate using a cable tie as per **photo 1** and fit adapter plate to additional camera plug bracket.
4. Using supplied M4 hardware, mount additional plugs to the TLR Products bracket in chosen orientation.
5. Fit airbag valves in holes supplied.
6. Fit the bracket to the vehicle using supplied 2 x M5 bolts and Nyloc nuts. **Photo 3**




PHOTO 2



PHOTO 3



79 SERIES

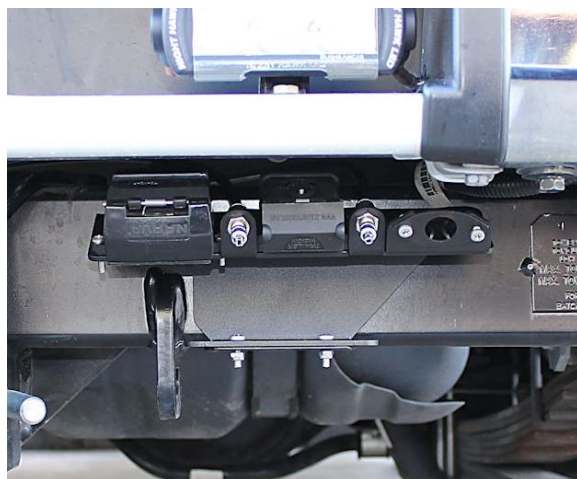

78 SEIRES



instagram.com/tlrproducts
facebook.com/tlrproducts



hello@tlrproducts.com.au
www.tlrproducts.com.au