



---

# AERIAL BRACKET LEFT SIDE BONNET HINGE

---

TLR741401



SUITED TO:

**TOYOTA HILUX N80**  
**TOYOTA FORTUNER AN160 SERIES**



## PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 30 minutes.



Spanner Socket Set

### FITTING KIT

QUANTITY	PART
1	TLR741401 –Mounting Bracket
2	Cable Tie 150 mm

### NOTE:


This Aerial Bracket is designed to mount to the left-hand side rear section of the bonnet.





## FITTING INSTRUCTIONS

1. We recommend applying masking tape along the rear edge of the bonnet to protect against scratching.
2. Remove the 2x M8 bonnet mounting bolts.  
*NOTE: ensure to hold the bonnet securely, we recommend the help of a second person to support the bonnet.*
3. Place the TLR Products mounting bracket over the mounting holes and re-fit the previously removed M8 Bonnet mounting bolts.
4. Ensure the TLR Products bracket has adequate clearance around the bonnet before securing into place.

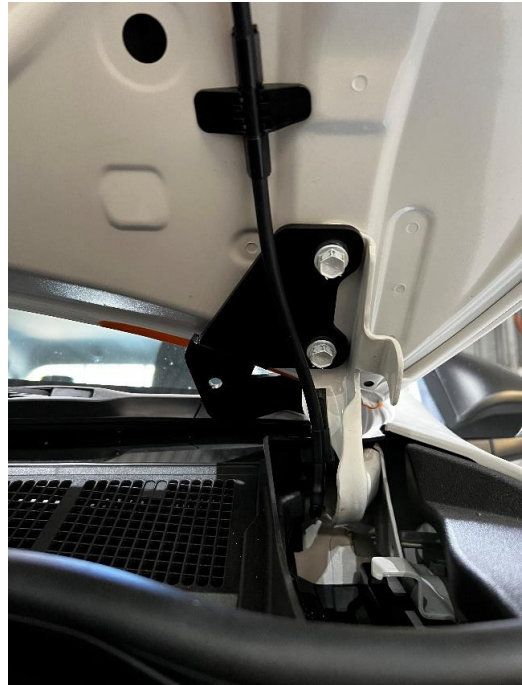

[instagram.com/tlrproducts](https://www.instagram.com/tlrproducts)  
[facebook.com/tlrproducts](https://www.facebook.com/tlrproducts)



[hello@tlrproducts.com.au](mailto:hello@tlrproducts.com.au)  
[www.tlrproducts.com.au](http://www.tlrproducts.com.au)



TLR Products  
65 Northville Drive  
Barnsley NSW 2278