




AERIAL BRACKET RIGHT SIDE BONNET HINGE

TLR741402

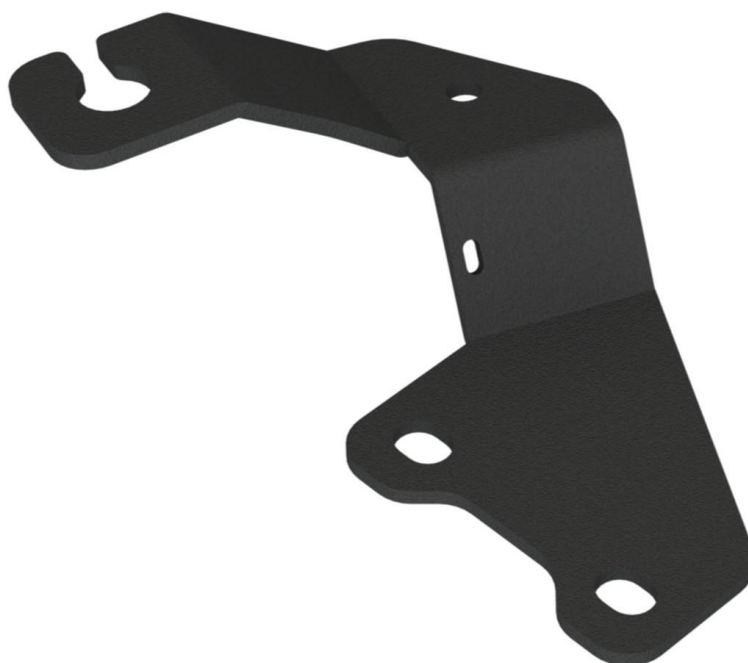

SUITED TO:

TOYOTA HILUX N80

TOYOTA FORTUNER AN160 SERIES



PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 30 minutes.



Spanner Socket Set

FITTING KIT

QUANTITY	PART
1	TLR741402 – Mounting Bracket
2	Cable Tie 150 mm

NOTE:

This Aerial Bracket is designed to mount to the right-hand side rear section of the bonnet.





FITTING INSTRUCTIONS

1. We recommend applying masking tape along the rear edge of the bonnet to protect against scratching.
2. Remove the 2x M8 bonnet mounting bolts.
NOTE: ensure to hold the bonnet securely, we recommend the help of a second person to support the bonnet.
3. Place the TLR Products mounting bracket over the mounting holes and re-fit the previously removed M8 Bonnet mounting bolts.
4. Ensure the TLR Products bracket has adequate clearance around the bonnet before securing into place.



[instagram.com/tlrproducts](https://www.instagram.com/tlrproducts)
[facebook.com/tlrproducts](https://www.facebook.com/tlrproducts)



hello@tlrproducts.com.au
www.tlrproducts.com.au



TLR Products
65 Northville Drive
Barnsley NSW 2278