



---

# **AERIAL BRACKET RIGHT-HAND SIDE BONNET**

---

TLR744008



SUITED TO:

**FORD RANGER/RANGER RAPTOR/  
EVEREST – NEXT GEN SERIES**



# PRE-INSTALLATION



Read through this installation guide before proceeding.




Fitting time is approx. 30 minutes.



Spanner Socket Set

FITTING KIT	
QUANTITY	PART
1	TLR744004 –Mounting Bracket
2	Cable Tie 150 mm


**NOTE:**  
This Aerial Bracket is designed to mount to the left-hand side rear section of the bonnet.

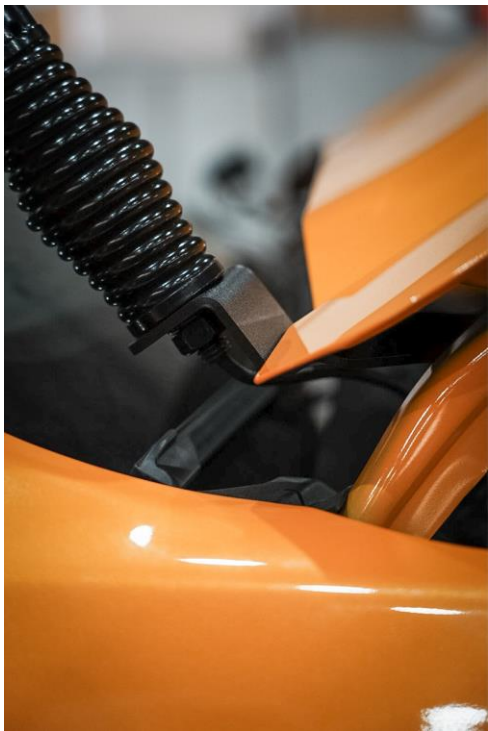



## FITTING INSTRUCTIONS


1. Unclip lower OEM plastic clip and remove from rubber hose.
2. Remove both bonnet mounting nuts, ensure you take the weight of the bonnet when doing this.  
*TIP: Have the TLR Products bracket close by to help with fitment.*
3. Place TLR Products Aerial Bracket over bonnet studs and refit the OEM hardware to secure into place.  
*NOTE: Ensure the bracket is positioned with adequate clearance along the back of the bonnet.*

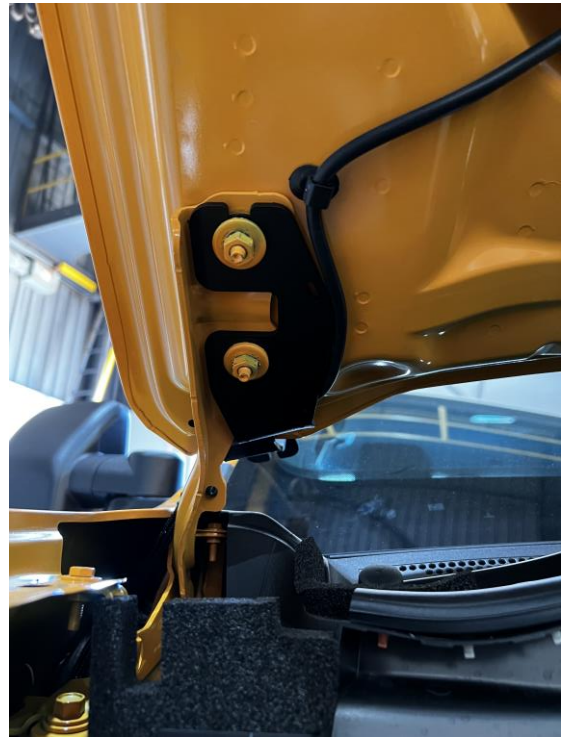

[instagram.com/tlrproducts](https://www.instagram.com/tlrproducts)  
[facebook.com/tlrproducts](https://www.facebook.com/tlrproducts)



[hello@tlrproducts.com.au](mailto:hello@tlrproducts.com.au)  
[www.tlrproducts.com.au](http://www.tlrproducts.com.au)

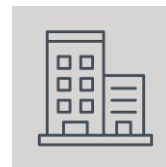

TLR Products  
65 Northville Drive  
Barnsley NSW 2278