



AERIAL BRACKET LEFT SIDE BONNET HINGE

TLR744801



SUITED TO:

**ISUZU DMAX RG SERIES
ISUZU MUX RJ SERIES**



PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 30 minutes.



Spanner Socket Set

FITTING KIT

QUANTITY	PART
1	TLR744801 – Mounting Bracket
2	M8 x 25 mm High Tensile Bolts
2	M8 x 17 mm Flat Washers
2	M8 Spring Washers
2	Cable Tie 150 mm

NOTE:


This Aerial Bracket is designed to mount to the left-hand side rear section of the bonnet.





FITTING INSTRUCTIONS

1. We recommend applying masking tape along the rear edge of the bonnet to protect against scratching
2. Remove front bonnet mounting bolt and discard.
3. Position the TLR Products Aerial Bracket and install 1 of the supplied M8 mounting bolts with flat and spring washer supplied in the front mounting hole.
TIP: leave loose enough to rotate bracket into position.
4. Remove rear bonnet mounting bolt, rotate TLR Products bracket into position and fit the remaining M8 hardware.
5. Ensure the bracket has adequate clearance around the bonnet and tighten mounting bolts to secure bracket in position.

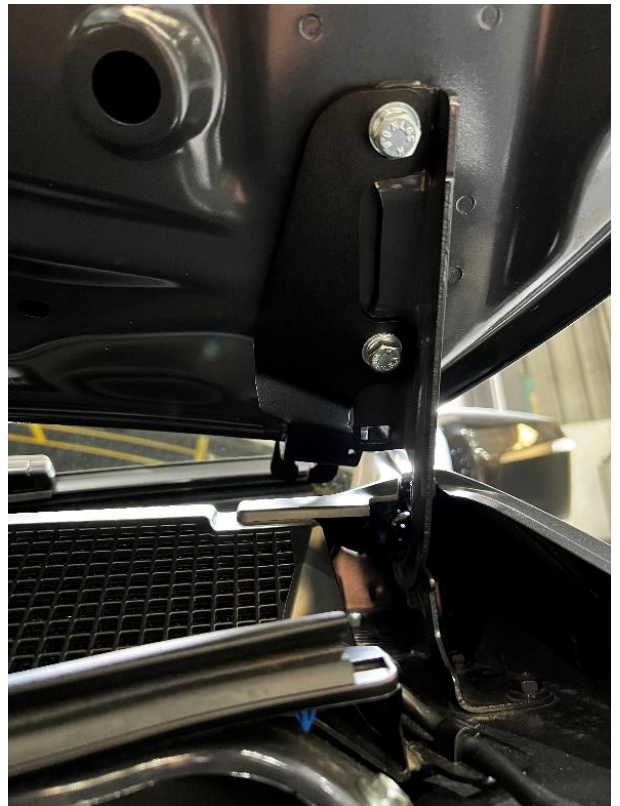

hello@tlrproducts.com.au
www.tlrproducts.com.au



instagram.com/tlrproducts
facebook.com/tlrproducts