



HD AWNING BRACKET LARGE (2 Pack)

TLR940004



SUITED TO:

**RHINO RACK VORTEX & HEAVY-DUTY
ROOF RACK SYSTEM**



PRE-INSTALLATION



Read through this installation guide before proceeding.




Fitting time is approx. 10 minutes.



Spanner Socket Set
Allen Key Set

FITTING KIT

QUANTITY	PART
2	TLR940004 – Awning Bracket - Large
4	M8 Channel Nut
4	M8 x 16 mm SS Button Head Socket
4	M8 x 20 mm SS Button Head Socket
4	M8 SS Flat Washer
4	M8 SS Spring Washer

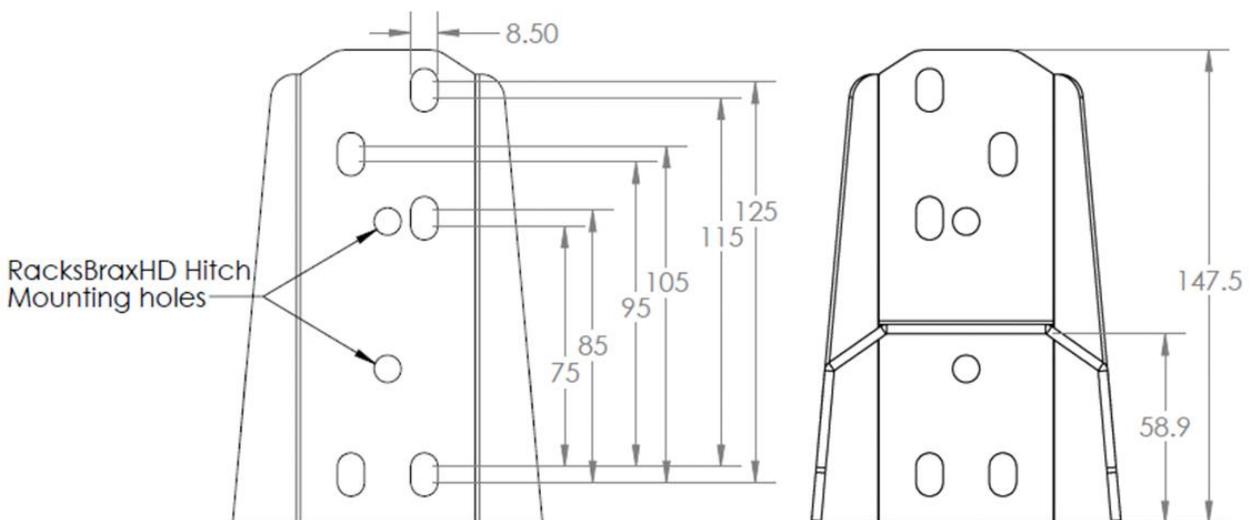

NOTE:

This TLR Products Awning Bracket is designed to suit most popular 270-degree awnings.

Compatible with the Rhino Rack Vortex Bars & Heavy-Duty Bars.



FITTING INSTRUCTIONS

1. Remove the rubber channel capping from the cross bar.
2. Remove the end cap off the cross bar and install 2 x supplied channel nuts into the top channel.
3. Re-fit cross bar end cap and position Awnings Bracket into place.
4. Install the M8 supplied hardware through the Awning Bracket into the channel nuts to fix awning bracket into position.
NOTE: the 16 mm long bolts are used for the Vortex Style Cross Bar, the 20 mm long bolts are used for the Heavy-Duty Style Cross Bar.
5. Refit rubber channel capping, it will be required to trim this to suit.
6. Repeat these steps for the other mounting bracket.
7. Install the awning to the brackets.



[instagram.com/tlrproducts](https://www.instagram.com/tlrproducts)
[facebook.com/tlrproducts](https://www.facebook.com/tlrproducts)



hello@tlrproducts.com.au
www.tlrproducts.com.au