



---

# QUADLOCK®/RAM® PHONE MOUNTING BASE

---

TLR742404



SUITED TO:

**SUZUKI JIMNY JB74/JB64/JC74  
DRIVER SIDE DASH**



## PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 30 minutes.



Allen Key Set  
Screwdriver  
Trim Removal Tool

### FITTING KIT

QUANTITY	PART
1	TLR742404 –Mounting Base
1	M8 x 35 mm Socket Head Bolt Countersunk – Black
4	M5 x 29 mm Socket Head Bolt Countersunk
4	M5 Nyloc Nut






### NOTE:

This Phone Mounting Base is design to suit both the Quadlock 360 and RAM Mount Base Plates which use the standard 38 x 30 mm AMPS Pattern.



## FITTING INSTRUCTIONS

1. Remove the Plastic Trim piece shown in Photo 1.  
*NOTE: this is done by pulling the piece away from the dash to release the clips.*
2. Mount your chosen Pivot Mount Base (*Quad lock shown in photo*) to the TLR Products mount, See Photo 2 for example.
3. Remove the Faux Rubber Bolt from the Trim. Place the TLR Products Mount in position and install the M8 x 30 mm Bolt supplied to fix into place. See Photo 3.  
*NOTE: there is an OEM Captive nut located in the back of the trim.*
4. Clip the trim back into place and install the remaining components for the pivot of choice to finalise installation. See Photo 4.

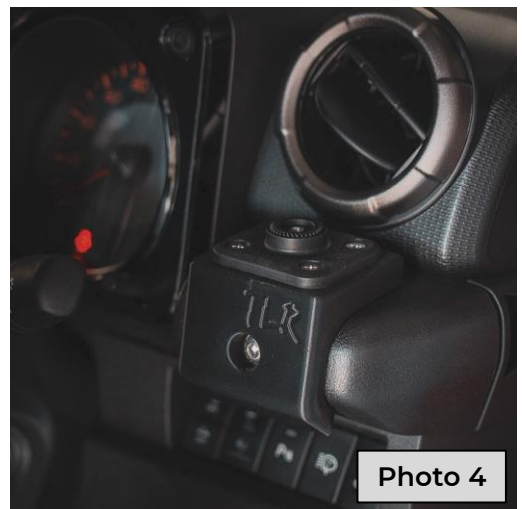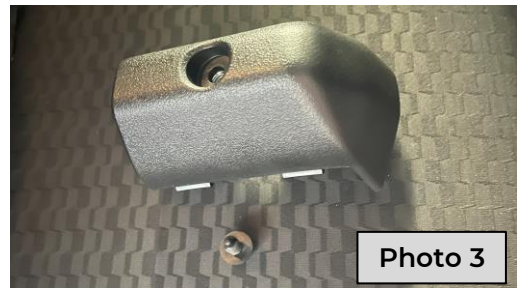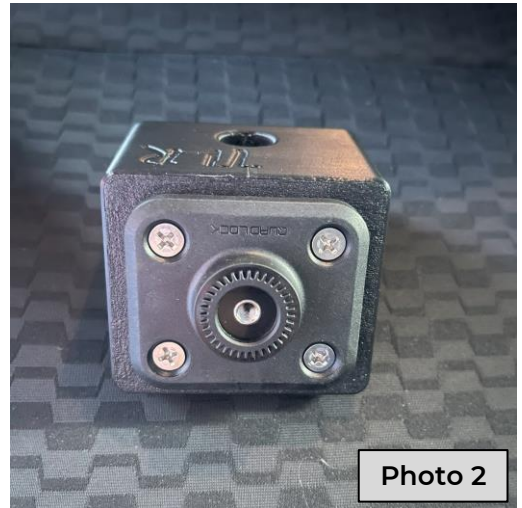

[instagram.com/tlrproducts](https://www.instagram.com/tlrproducts)  
[facebook.com/tlrproducts](https://www.facebook.com/tlrproducts)



[hello@tlrproducts.com.au](mailto:hello@tlrproducts.com.au)  
[www.tlrproducts.com.au](http://www.tlrproducts.com.au)