


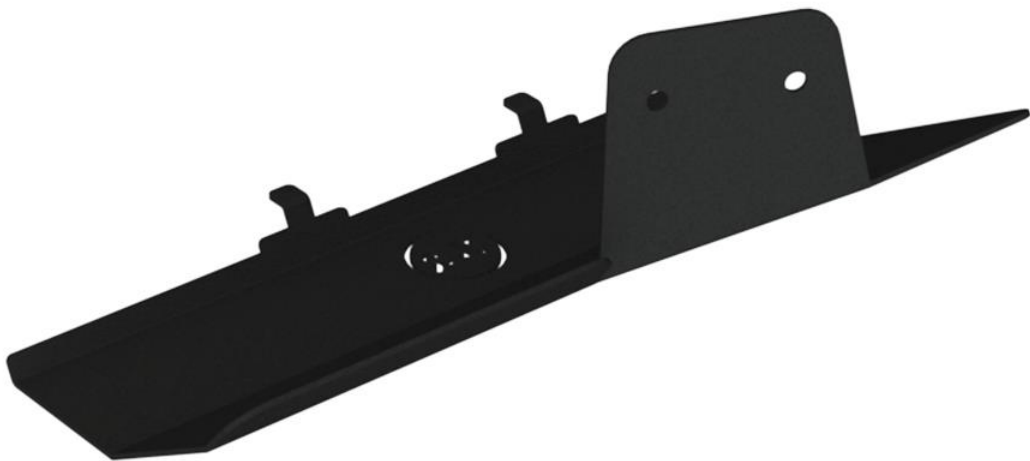

PROTECTION GUARD LEFT HAND SIDE

TLR715103



SUITED TO:

GWM TANK 300



PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 30 minutes.



Spanner, Socket Set, Phillips Head Screwdriver

FITTING KIT

QUANTITY	PART
1	TLR715103 – Protection Guard
2	M5 x 16 mm SS Pan Phillips Head
2	M5 SS Nyloc Nuts
4	M5 SS Flat Washer




NOTE:

This TLR Products Protection Guard mounts to the TLR Products GWM Tank 300 Multi Trailer Plug Bracket (TLR715102)



FITTING INSTRUCTIONS

1. This Protection Guard requires the TLR Products Multi Trailer Plug Bracket fitment to be completed before installation.
2. Install the Protection Guard by locating the mounting lugs through designated slots. This is done by sliding the lugs up through the slot and rotating the bracket into position.
See Photo 1 & 2.
3. Once you have the guard sitting in place. Fit the supplied M5 mounting hardware into place as shown in **Photo 2.**
4. Finalise fitment by firmly securing all mounting bolts.

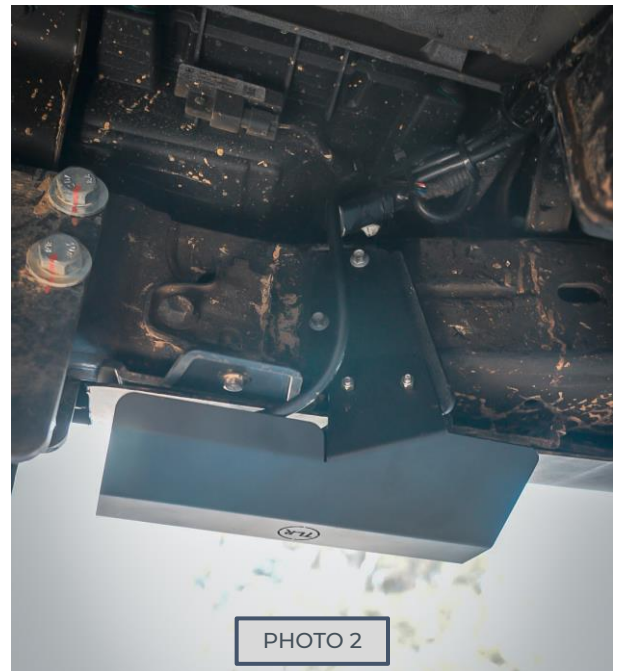

[instagram.com/tlrproducts](https://www.instagram.com/tlrproducts)
[facebook.com/tlrproducts](https://www.facebook.com/tlrproducts)



hello@tlrproducts.com.au
www.tlrproducts.com.au



TLR Products
65 Northville Drive
Barnsley NSW 2278