


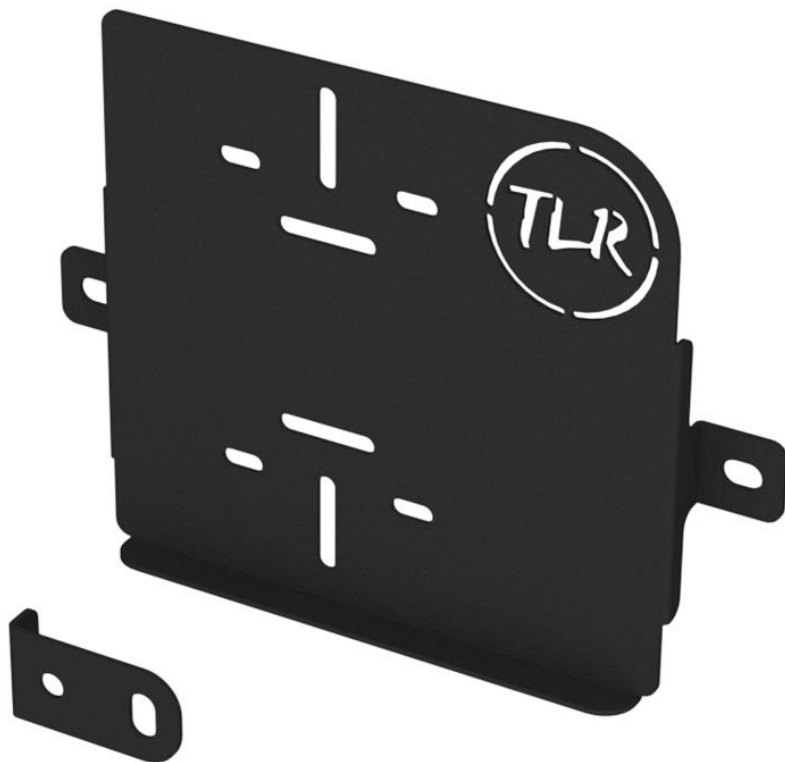

UHF BRACKET ABOVE GLOVE-BOX

TLR741203



SUITED TO:

TOYOTA LANDCRUISER 70 SERIES RANGE



PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 20 minutes.



Allen keys
Phillips Head
Screwdriver

FITTING KIT	
QUANTITY	PART
1	TLR741203-1 – Mounting Bracket
1	TLR741203-2 – Wiring Relocation Bracket
3	M6 x 12 mm Button Head Bolts
2	M6 x 12 mm Flat Washers
2	M6 Spring Washers
1	M6 Nyloc Nut
4	M4 x 10 mm Phillips Head Bolts
4	M4 Nyloc Nuts
2	Cable Tie 150 mm
1	16.3 mm Convoluted tubing 100mm Long – ELCOTU16



NOTE:
This Bracket locates the UHF unit in the cavity above the glove box area.





FITTING INSTRUCTIONS

1. Remove the Glove Box, this is done by opening the glove box and pressing both sides inwards to clear the retainers, once you have done this you can then lift the glove box up off the bottom hinge.
2. Unclip the factory wiring loom retainer from the heater box and install the TLR741203-2 bracket using one M6x12 bolt and Nyloc nut. Push the wiring forward and clip into the slotted hole in the relocation bracket. Install convoluted tubing to wiring loom as shown in **photo 1**.
3. Mount the UHF Unit to the TLR Products Bracket using the M4 hardware supplied.
NOTE: Orientate the module as per photo 2, this ensures easy routing for wiring etc.
4. Install the UHF/Mounting Bracket assembly to the 2 x OEM captive nuts using the M6 hardware supplied as per **photo 3**.
5. Complete all wiring for the UHF before re-installing the glove-box to finish installation.

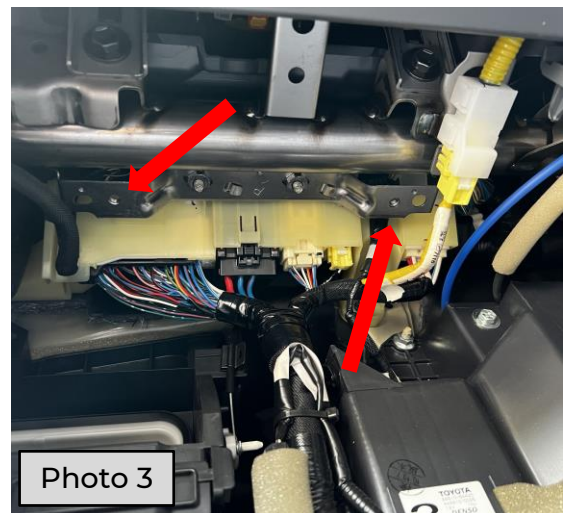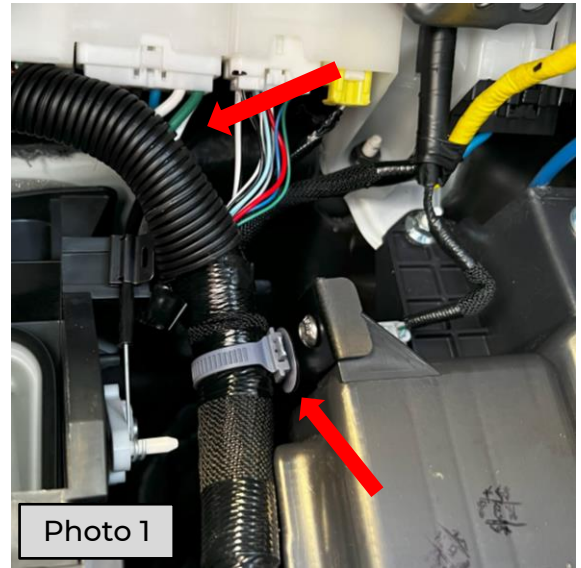

hello@tlrproducts.com.au
www.tlrproducts.com.au



instagram.com/tlrproducts
facebook.com/tlrproducts