



---

# AERIAL BRACKET LEFT SIDE BONNET HINGE

---

TLR744601



SUITED TO:

**MITSUBISHI TRITON MV SERIES**



## PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 20 minutes.



Spanner Socket Set

### FITTING KIT

QUANTITY	PART
1	TLR744601 –Mounting Bracket
1	40 x 12 mm Wide Protection Tape
2	Cable Tie 150 mm



### NOTE:

This Aerial Bracket is designed to mount to the left-hand side rear section of the bonnet.

Occasionally the spring base of the aerial may not be true, rotate the aerial to achieve best possible alignment before tightening to secure in place.

If fitting a Ditch light, it is Recommended to use the TLR products TLR740001 Adapter Washer Set (Sold Separately)



## FITTING INSTRUCTIONS

1. It is recommended to place Masking Tape along the backside of the bonnet to protect any damage during installation.
2. Place the supplied Protection Tape on the TLR Products Aerial Mounting Bracket *as per Photo 1*.
3. Remove the two bonnet mounting bolts from the hinge and position the Aerial Mounting Bracket over the bonnet mounting holes and refit bonnet mounting bolts. *NOTE: It is recommended to have an assistant support the bonnet during the installation.*
4. Once you have installed the bracket, ensure correct bonnet alignment.
5. Fit the Aerial or Ditch Light of choice to the Mounting Bracket and route the cable down the outside edge of the bracket and secure using the cable ties provided to prevent pinching.
6. Remove Masking Tape and confirm all hardware is secure to complete installation.

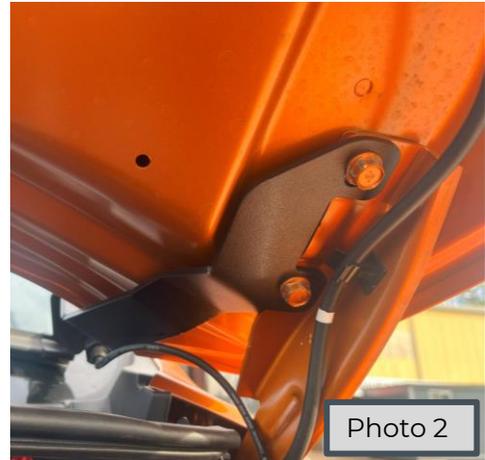


Photo 2

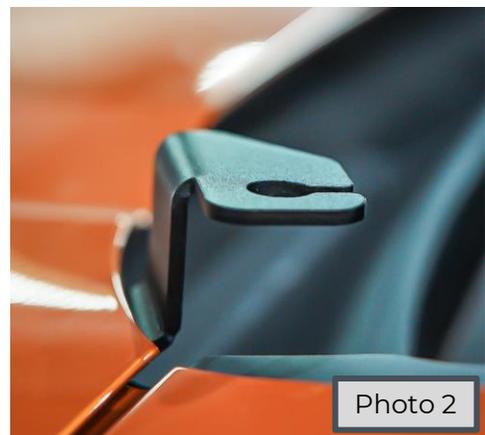


Photo 2



[instagram.com/tlrproducts](https://www.instagram.com/tlrproducts)  
[facebook.com/tlrproducts](https://www.facebook.com/tlrproducts)



[hello@tlrproducts.com.au](mailto:hello@tlrproducts.com.au)  
[www.tlrproducts.com.au](http://www.tlrproducts.com.au)



TLR Products  
65 Northville Drive  
Barnsley NSW 2278