


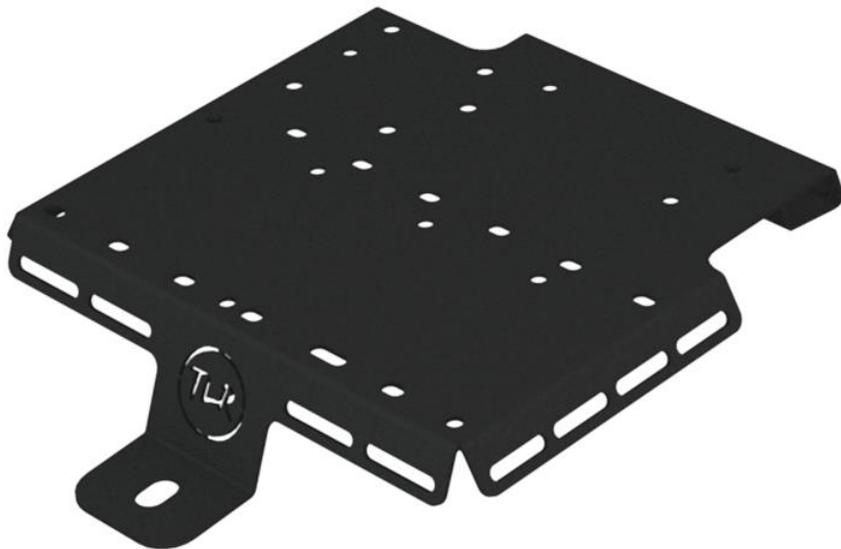

ELECTRICAL ACCESSORY BRACKET

TLR814601



SUITED TO:

MITSUBISHI TRITON MV SERIES



PRE-INSTALLATION



Read through this installation guide before proceeding.




Fitting time is approx. 10 minutes.



Spanner, Socket Set, Phillips Head Screwdriver

FITTING KIT

QUANTITY	PART
1	TLR814601 – Electrical Accessory Bracket

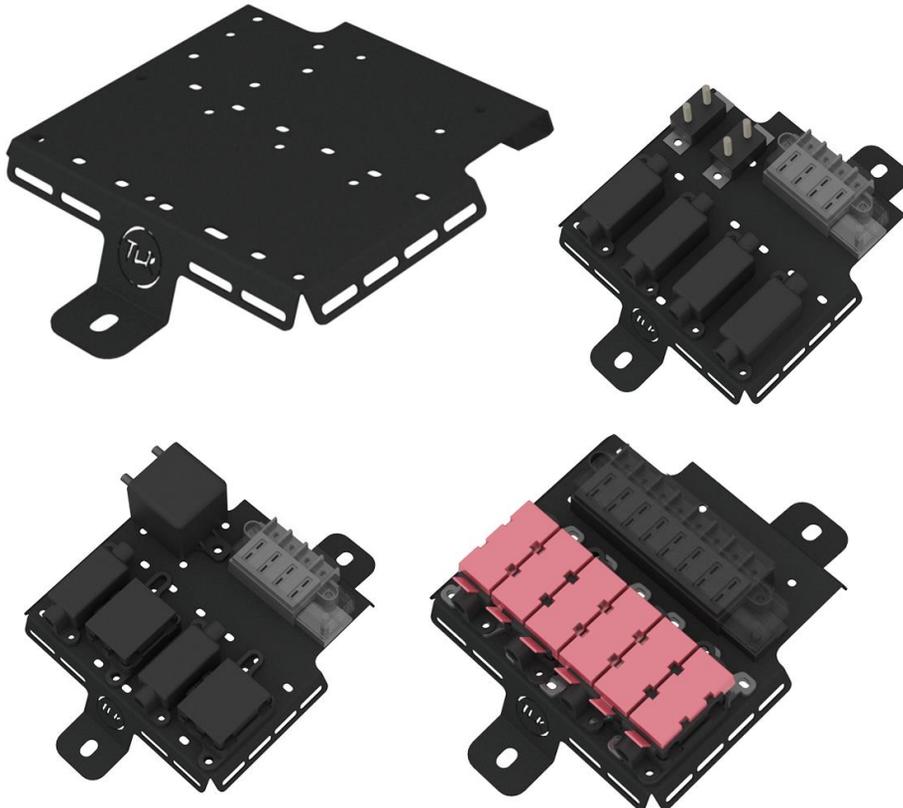

NOTE:

This TLR Products Bracket is designed to suit various universal applications and locates on the OEM battery.




FITTING INSTRUCTIONS

1. Confirm which components and orientation is to be used and assemble components onto TLR Products Bracket.

NOTE: Double check clearances before connecting power and tightening fixings.

TIP: it is recommended to route all cabling to the rear side of the bracket to allow for easy battery removal.

2. Remove the two M6 battery clamp bolts and position the TLR Products Bracket over the OEM battery clamp.
3. Refit the M6 Battery clamp bolts and securely tighten.
4. Complete all necessary wiring to finish the installation.

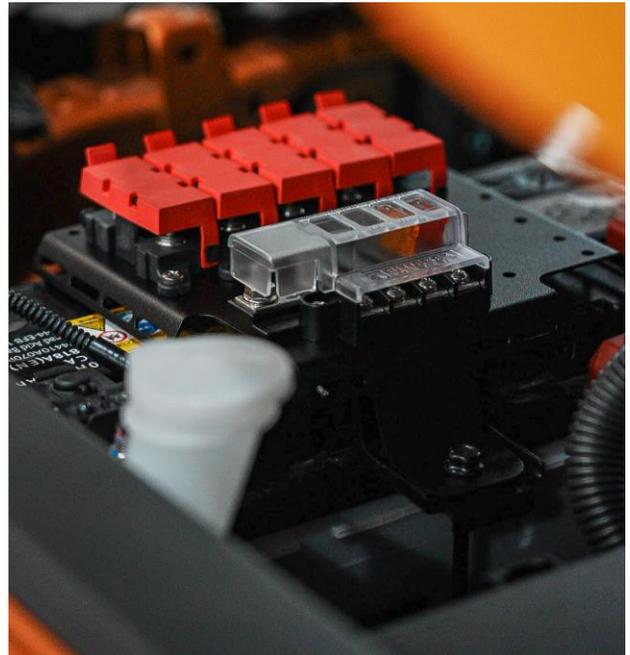

[instagram.com/tlrproducts](https://www.instagram.com/tlrproducts)
[facebook.com/tlrproducts](https://www.facebook.com/tlrproducts)



hello@tlrproducts.com.au
www.tlrproducts.com.au



TLR Products
65 Northville Drive
Barnsley NSW 2278