



---

# MULTI TRAILER 3 PLUG BRACKET LEFT HAND SIDE

---

TLR712102




SUITED TO:


**TOYOTA PRADO 250 SERIES**




# PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 20 minutes.



Spanner  
Socket Set  
Phillips Head  
Screwdriver

FITTING KIT	
QUANTITY	PART
1	TLR712102 – Multi Trailer Plug Bracket
1	TLR710010 - Camera Plug Bracket
1	TLR710008 - Adapter Plate
2	M8 x 24 x 2 mm Flat Washer SS
4	M4 x 20 mm Pan Phillips Head SS
2	M4 x 16 mm Pan Phillips Head SS
2	M4 x 10 mm Pan Phillips Head SS
8	M4 Nyloc Nut SS
1	Cable tie 150 mm

**NOTE:**  
This TLR Products Multi Trailer Plug Bracket is designed to mount to existing mounting bolts located in the OEM trailer plug location on the left-hand side.

This TLR Products Multi Trailer Plug Bracket mounts to the passenger side of the vehicle and accommodates a 7/12 pin flat trailer plug, Anderson Plugs, Camera Plug, air bag valves and a breakaway location.

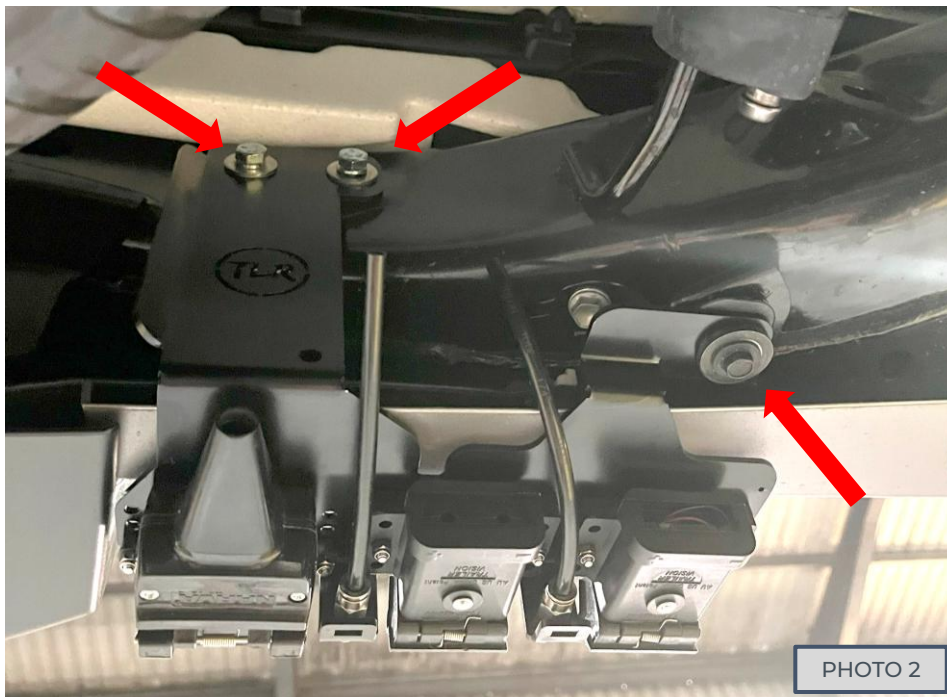


PHOTO 1



## FITTING INSTRUCTIONS

1. Confirm which plugs will be fitted and the location of each plug  
*Note: we recommend wiring all plugs before fitting them to the TLR Products Bracket.*
2. Fit air bag valves if required.
3. Fit all required plugs to the TLR Products Bracket using the M4 hardware supplied.  
*Note: if fitting a safety-dave style camera plug, this mounts to the supplied adapter bracket using the cable tie supplied.*  
**Photo 1.**
4. Remove the OEM mounting bolts from the rear passenger side of the vehicle **Photo 2.**
5. Fit TLR Products mounting bracket into place using OEM bolts removed in previous step and large washer supplied. **Photo 2**



hello@tlrproducts.com.au  
www.tlrproducts.com.au



instagram.com/tlrproducts  
facebook.com/tlrproducts