



QUADLOCK®/RAM® PHONE MOUNTING BASE

TLR744602



SUITED TO:

**MITSUBISHI TRITON MV SERIES
DRIVER SIDE GRAB HANDLE**



PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 15 minutes.



Socket Set
Screwdriver
Trim Removal Tool

FITTING KIT

QUANTITY	PART
1	TLR744602-1 – Mounting Bracket
1	TLR744602-2 – Plastic Packer
4	M5 x 16mm SS Countersunk Phillips head
4	M5 SS Nyloc Nut

NOTE:

This Mount is designed to suit all MV series variants and locates on the driver's side grab handle.



Photo 4



FITTING INSTRUCTIONS

1. Install the Quad Lock components using the hardware supplied with both the Quadlock parts along with the TLR Products fitting kit.
See Photo 1 for suggested orientation.
2. Remove the driver side A-Pillar grab handle **As per Photo 2.** This is done by releasing the plastic covers to access the mounting bolt.
3. Once grab handle is removed, place the TLR Products Plastic Packer over the upper mount and manufactured bracket over the lower mount. **Refer to photo 3**
4. Loosely fit grab handle into position.
5. Ensure correct alignment of components and tighten mounting bolts to secure in place.
Refer to Photo 4
6. Adjust Quad Lock pivot mount to suitable position.



Photo 1

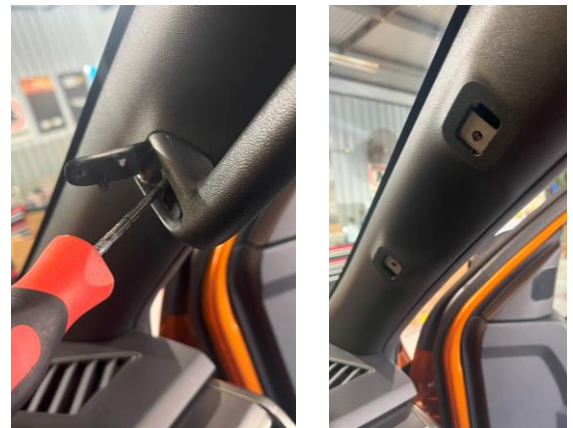


Photo 2

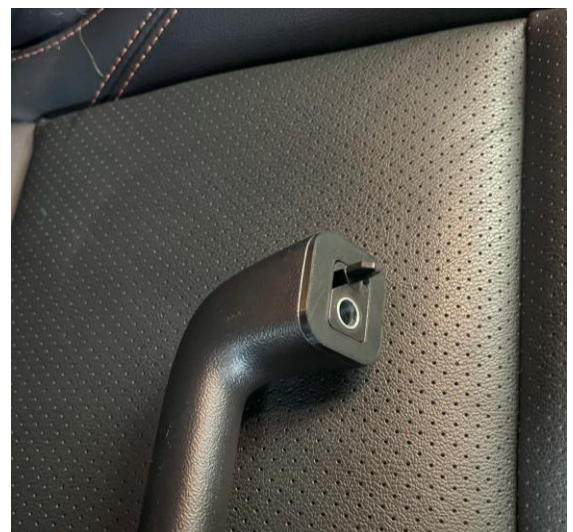


Photo 3



[instagram.com/tlrproducts](https://www.instagram.com/tlrproducts)
[facebook.com/tlrproducts](https://www.facebook.com/tlrproducts)



hello@tlrproducts.com.au
www.tlrproducts.com.au