



QUADLOCK®/RAM® PHONE MOUNTING BASE

TLR741405



SUITED TO:

**TOYOTA HILUX N80 SERIES
DRIVERS SIDE GRAB HANDLE**



PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 15 minutes.



Screwdriver, Socket Set, Plastic trim removal tool

FITTING KIT

QUANTITY	PART
1	TLR741405-1 – Mounting Bracket
4	M5 x 16 SS Countersunk Phillips Head
4	M5 x 16 SS Pan Phillips Head
4	M5 SS Nyloc Nut

NOTE:



This Mount is designed to suit all N80 series variants and locates on the driver's side grab handle.





FITTING INSTRUCTIONS

1. Install the chosen phone mount components using the hardware supplied with both the phone mount components and the TLR Products fitting kit. See **photos 1 & 2**.
2. Remove the right-hand side A pillar grab handle by carefully removing the two mounting bolt covers and M6 bolts. **Photo 3**.
3. Position the phone mount assembly over the two grab handle mounting bolt locations. Install the grab handle and M6 mounting bolts, ensure correct alignment and securely tighten the bolts. **Photo 4**.
4. Adjust phone mount pivot to the desired position to complete the installation.

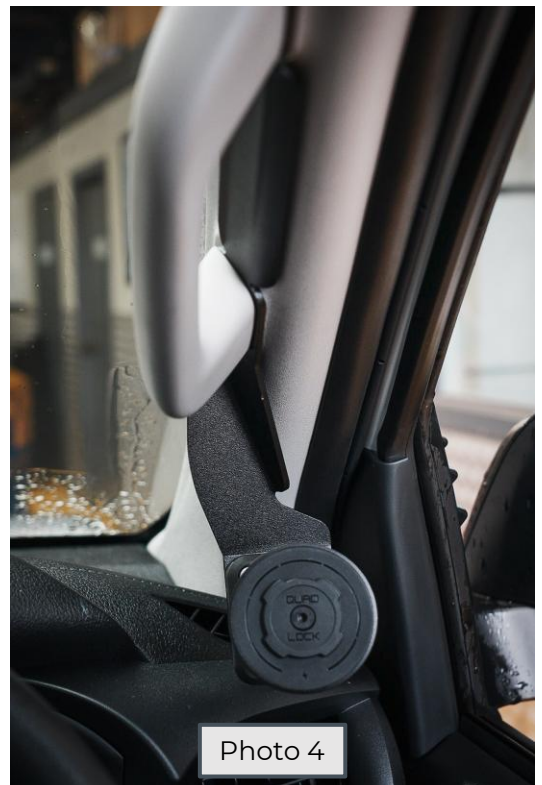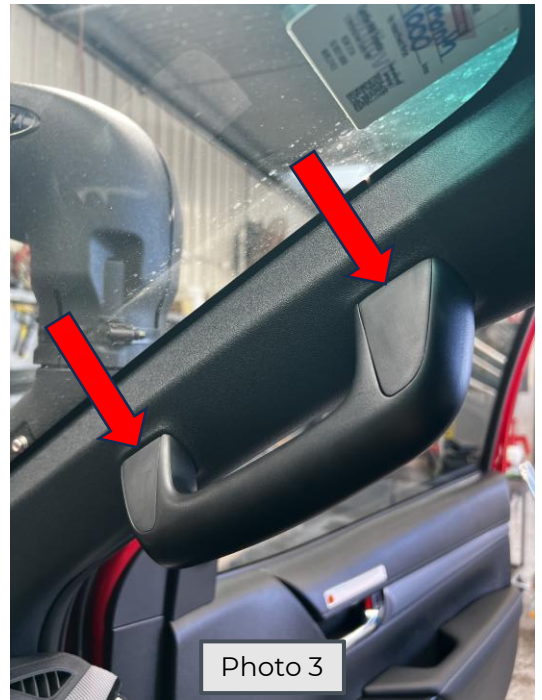

hello@tlrproducts.com.au
www.tlrproducts.com.au



instagram.com/tlrproducts
facebook.com/tlrproducts