




ALPINE SERIES POWER SWITCH MOUNT

TLR990006

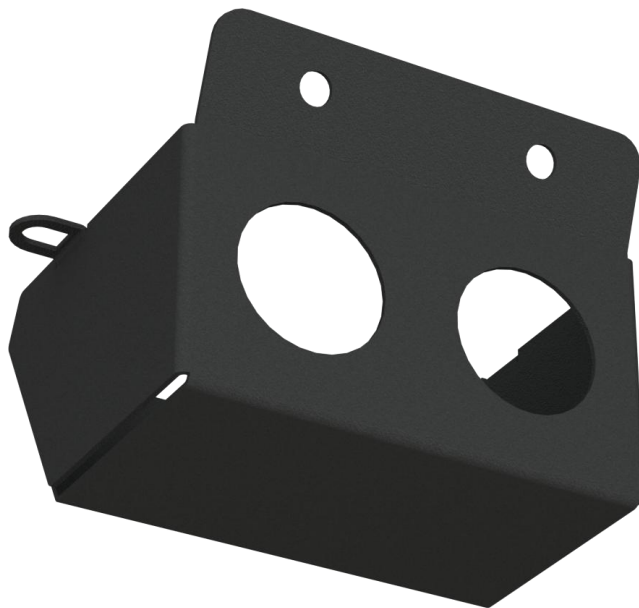

SUITED TO:

**TLR PRODUCTS ALPINE SERIES
STORAGE SHELVES**



PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 10 minutes.



Allen Key Set
Spanner
Socket Set

FITTING KIT

QUANTITY	PART
1	TLR990006 Mounting Bracket
4	M6 x 12 mm Button Head Bolt SS
4	M6 Nyloc Nuts SS



NOTE:

This product is part of the Alpine Series Range from TLR Products and suits fitment along the front edge of all “Alpine Series” Storage Shelves.
The Mount is designed to house the Flush Mount Sockets



FITTING INSTRUCTIONS

1. Install the Sockets to the TLR Product Mounting Bracket.
2. Fit the bracket assembly to the rear angles face of the TLR Products Storage Shelf using the supplied M6 hardware.
3. Complete all wiring required to finalise installation.



hello@tlrproducts.com.au
www.tlrproducts.com.au



instagram.com/tlrproducts
facebook.com/tlrproducts