



---

# ALPINE SERIES STORAGE SHELF

---

TLR992501



SUITED TO:

**TOYOTA LANDCRUISER 300 SERIES**



## PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 20 minutes.



Allen key set  
Spanner  
Socket Set  
Pliers

### FITTING KIT

QUANTITY	PART
1	TLR992101-1 Storage Shelf
2	TLR992101-4 Plastic Corner (Rear)
2	TLR992101-5 Plastic Corner (Front)
1	TLR992501-3 Right-Hand Side Mounting Bracket
1	TLR992501-6 Left-Hand Side Mounting Bracket
4	TLR992501-4 Aluminum Channel Nut
4	TLR992501-5 Plastic Clip
8	M5 x 12 Button Head Bolt SS
8	M5 Nyloc Nut SS
4	M6 x 12 mm Button Head Bolt SS
4	M6 x 20 mm Button Head Bolt SS
1	M6 x 50 mm Hex Head ZP
4	M6 x 12.5 x 1.2 mm Flat Washer SS
4	M6 x 18 x 1.5 mm Flat Washer SS
1	1/4 x 1 1/4 Mudguard Washer ZP
4	M6 Nyloc Nuts SS
4	M6 Spring Washer SS

### NOTE:

This Storage Shelf is part of the Alpine Series Ranger from TLR Products and accommodates all Alpine Series accessories.




## FITTING INSTRUCTIONS

1. Remove both grab handles from the rear cargo area. This is done by removing the plastic cover, then use some pointy nose pliers to remove the small spring steel clips holding the handle in place. See **photo 1**.
2. Using the supplied M6 x 50mm Bolt and Large Washer. Assemble the Plastic Clip and Aluminium Channel Nut as per **Photo 2**.
3. Insert the Aluminium channel nut in through the rectangle and rotate 90 degrees as per **Photo 3**.
4. Push Plastic Clip up through hole and hold firmly in place, then pull on the M6 x 50mm Bolt to lock the aluminium channel nut back into place, see **Photo 4**.
5. Remove the M6 x 50mm bolt and repeat this step for all 4 mounting locations.





6. Once all the clips are in place, install the Shelf Mounting Brackets using the M6 x 20mm Button Head Bolts, Larger Washers and Spring Washers as per **Photo 5**.
4. Install the 4 plastic corner moulds as per **photo 6**, *NOTE: if installing the front riser panel (TLR962102) install this at this stage as per the relevant instructions.*
5. Once Shelf is assembled, slide the shelf assembly up on top of the mounting brackets via the 2<sup>nd</sup> row seat area.
6. Install the M6 x 12mm Button Head Bolts, Nyloc Nuts and Washers to secure the Shelf to the mounting brackets.

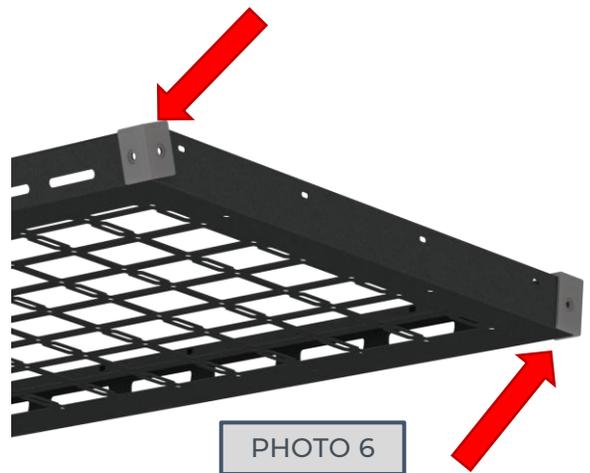

hello@tlrproducts.com.au  
www.tlrproducts.com.au



instagram.com/tlrproducts  
facebook.com/tlrproducts