




ALPINE SERIES 12V OVEN MOUNTING BRACKET

TLR990007

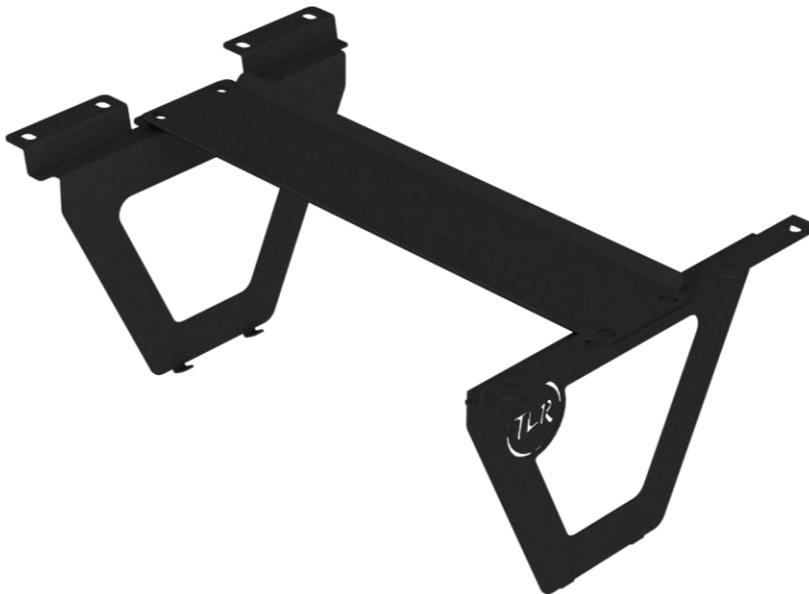

SUITED TO:

**TLR PRODUCTS ALPINE SERIES
STORAGE SHELVES / UNIVERSAL**



PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 15 minutes.



Allen Key Set
Spanner
Socket Set

FITTING KIT

QUANTITY	PART
2	TLR990007-1 Oven Mounting Bracket
1	TLR990007-3 Oven Clamp Bracket
2	TLR990007-4 Bracing Rib
16	M6 x 12 mm Button Head Bolt SS
16	M6 Nyloc Nuts SS
16	M6 x 12.5 mm Flat Washer SS
1	12 mm Protection Tape x 600 mm P#TR320CL12



NOTE:

This product is designed to suit the both the “Alpine Series” and Universal Applications.



FITTING INSTRUCTIONS

1. Install the supplied protection tape along both sides of the clamping bracket as per **Photo 1**.
2. Fit both side mounting brackets and top clamp plate to the oven as per **Photo 2** using the supplied M6 hardware.
3. Install the assembled mounting brackets and oven to the location of choice, see **Photo 3** for example of oven mounted to the TLR Products Alpine Series storage shelf.



Photo 1



Photo 2



Photo 3



hello@tlrproducts.com.au
www.tlrproducts.com.au



instagram.com/tlrproducts
facebook.com/tlrproducts