



ALPINE SERIES STORAGE SHELF

TLR994001



SUITED TO:

**FORD RANGER / RANGER RAPTOR NEXT GEN
– ARB ASCENT CANOPY**



PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 20 minutes.



Allen key set
Spanner
Socket Set
Pliers

FITTING KIT

QUANTITY	PART
1	TLR990001-1 Storage Shelf
2	TLR994001-1 Mounting Brackets
2	TLR992101-4 Plastic Corner (Rear)
2	TLR992101-5 Plastic Corner (Front)
8	M5 x 12 mm Button Head Bolt SS
8	M5 Nyloc Nut SS
6	M6 x 12 mm Button Head Bolt SS
6	M6 Nyloc Nuts SS



NOTE:

This Storage Shelf is part of the Alpine Series Ranger from TLR Products and accommodates all Alpine Series accessories.



FITTING INSTRUCTIONS

1. Remove the 3-roof rack support bracket mounting bolts from each corner of the canopy as shown in **photo 1**.
2. Slide one of the TLR990001-2 mounting brackets into position between the upper and lower support brackets as shown in **photo 1** and ensure the mounting bracket is aligned parallel with the window opening.
3. Re install the six bolts previously removed. **Photo 1**.
4. Repeat steps 1 and 2 for the other side.
5. Fit the two TLR992101-4 plastic corners to the front angled corners of the shelf using the supplied M5 hardware. **Photo 2**.
6. Fit the two TLR992101-5 plastic corners to the rear corners of the shelf using the supplied M5 hardware.

NOTE: If installing two shelves these plastic corners won't be used and the M5 hardware will be used to join the two shelves together.

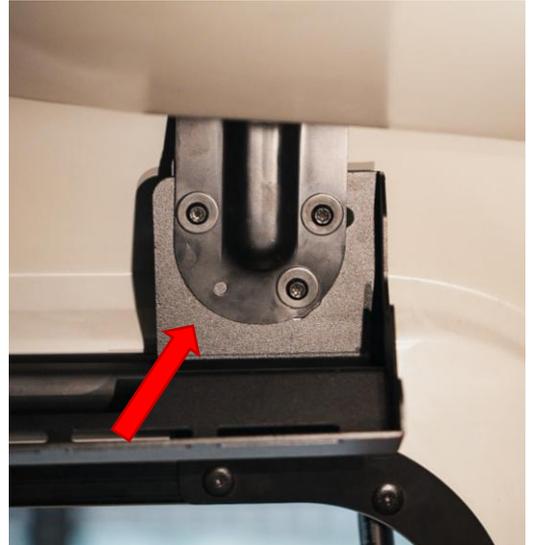


PHOTO 1

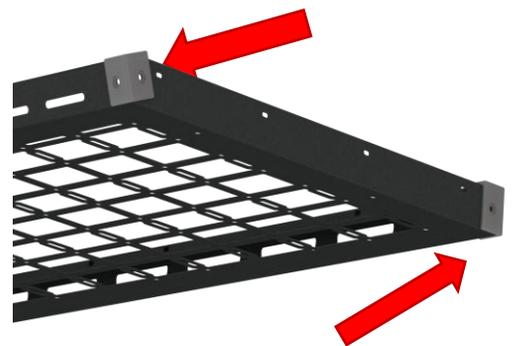


PHOTO 2



7. With both mounting brackets installed in the canopy, position the shelf on top of the brackets and fasten in the desired location using the supplied M6 hardware. **Photo 3.**



PHOTO 3



hello@tlrproducts.com.au
www.tlrproducts.com.au



instagram.com/tlrproducts
facebook.com/tlrproducts