




MULTI TRAILER 4 PLUG BRACKET

TLR714004

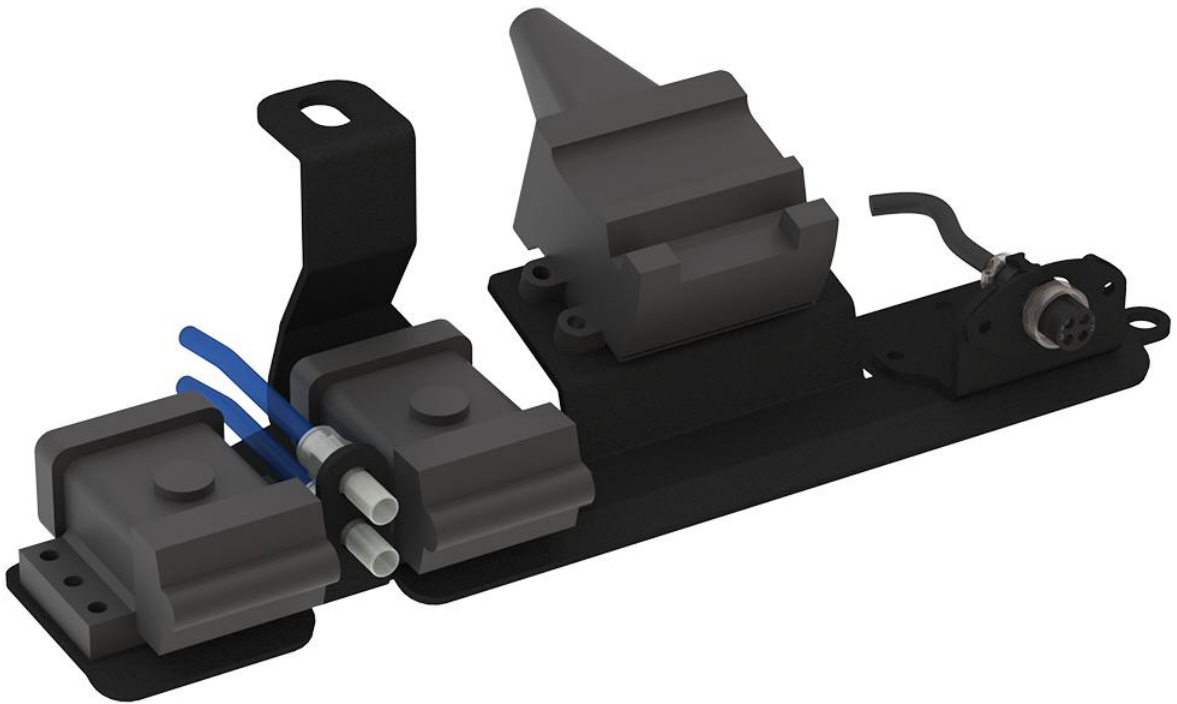

SUITED TO:
FORD RANGER SUPER DUTY



PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 15 minutes.



Basic Spanner Socket Set, Screwdrivers.

FITTING KIT	
QUANTITY	PART
1	TLR714004-1
1	TLR710010 Camera Plug Bracket
1	TLR710012 Adapter Plate
4	M4 x 20 mm SS Pan Phillips Head
2	M4 x 15 mm SS Pan Phillips Head
2	M4 x 10 mm SS CSK Phillips Head
8	M4 SS Nyloc Nut
1	Cable Tie 150 mm

NOTE:

This TLR Products bracket allows for mounting 7/12 pin 2x Anderson plugs, 1 x camera outlet, airbags, trailer break away.

We recommend doing all the wiring before mounting bracket to the vehicle.


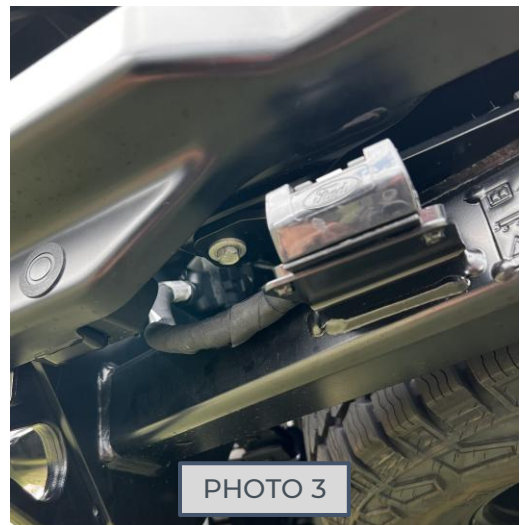


PHOTO 1



FITTING INSTRUCTIONS

1. Decide which plugs and fittings, and which orientation you will use.
2. If fitting a reversing camera plug use supplied additional bracket. If you are using a Safety Dave style camera plug, fit connector to adaptor plate using a cable tie as per **photo 1** and fit adapter plate to additional camera plug bracket.
3. Using supplied M4 hardware, mount additional plugs to the TLR Products Bracket in chosen orientation.
4. Fit airbag valves in holes provided. **Photo 2**.
5. Remove the OEM 12 pin plug from trailer plug mounting flange, and M8 mounting bolt shown in **Photo 3**.
6. Place Trailer Plug Bracket between the OEM Trailer Plug and mounting flange. Install the original T15 Torx bolts and M8 mounting bolt, ensure correct alignment and securely tighten. **Photo 4**.
7. Finish all wiring to complete the installation.

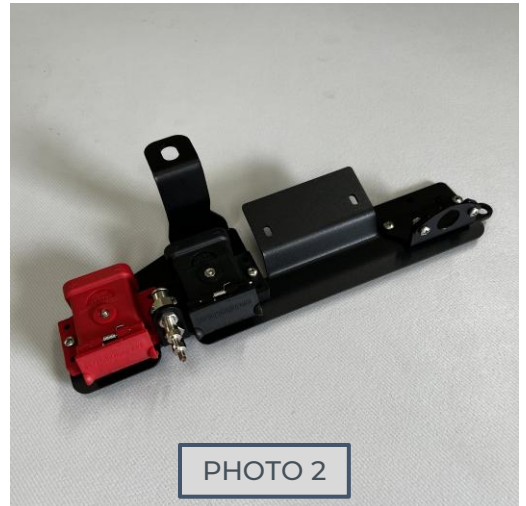

hello@tlrproducts.com.au
www.tlrproducts.com.au



instagram.com/tlrproducts
facebook.com/tlrproducts