




PROTECTION GUARD

TLR714806

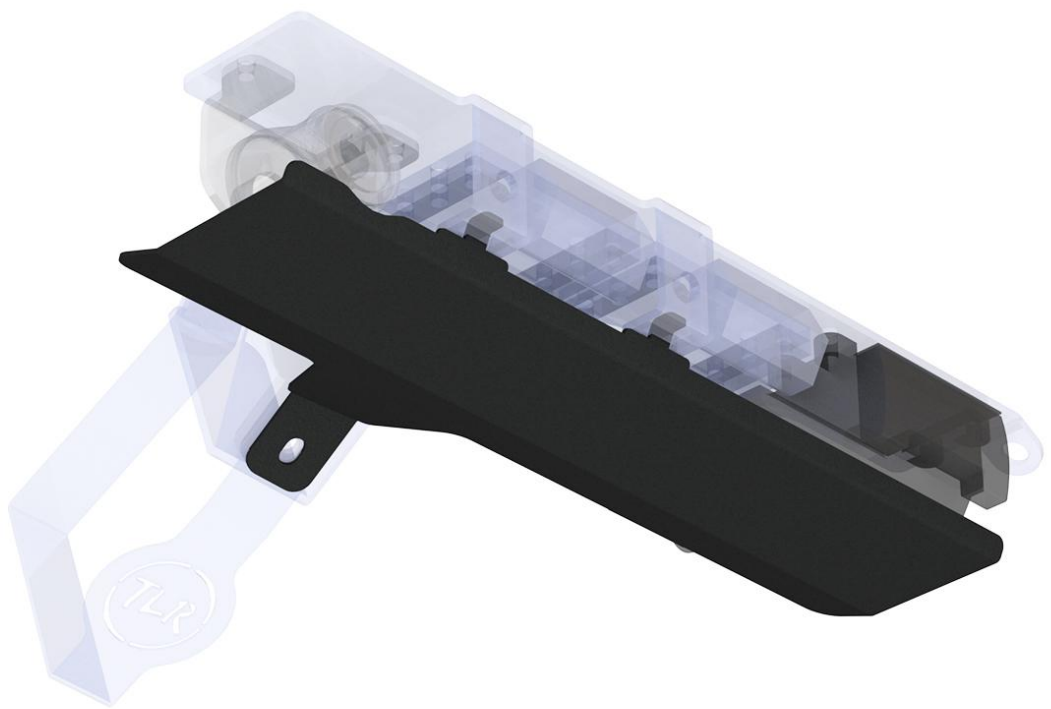

SUITED TO:
MAZDA BT50 TF SERIES



PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 30 minutes.



Basic spanner and socket set, Allen keys, Torx set

FITTING KIT

QUANTITY	PART
1	TLR714806 – Protection Guard
1	M6 x 12 SS Button Head Bolt
1	M6 SS Nyloc Nut
2	M6 x 12.5mm SS Flat Washer

NOTE:

This TLR Products Protection Guard requires installation of the Mazda BT50 TF series Multi Trailer Plug Bracket “TLR714805”.





FITTING INSTRUCTIONS

1. It is required for the TLR Products Multi Trailer Plug bracket (TLR714805) to be installed to the vehicle prior.
2. Remove the M6 x 16mm button head bolt located on the lower side of the Trailer Plug Bracket clamping strap as per **Photo 1**.
3. Position the Protection Guard in place by slotting the front mounting tabs into the Trailer Plug Bracket as per **Photo 2**. Refit the M6 button head bolt through the Protection Guard, Trailer Plug Bracket and clamping strap.
4. Install the supplied M6 hardware through the Protection Guard and mounting tab located on the back of the mount, See **Photo 3**.

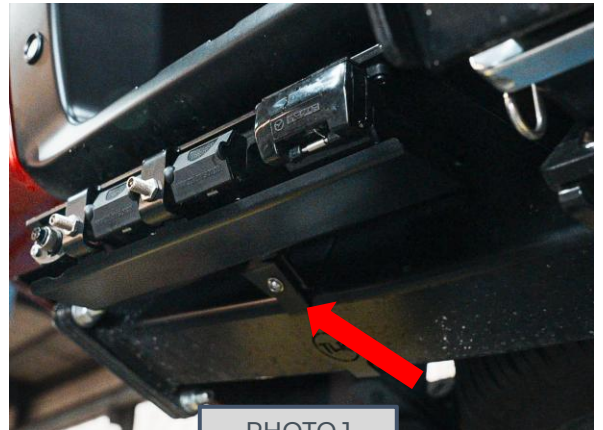


PHOTO 1



PHOTO 2

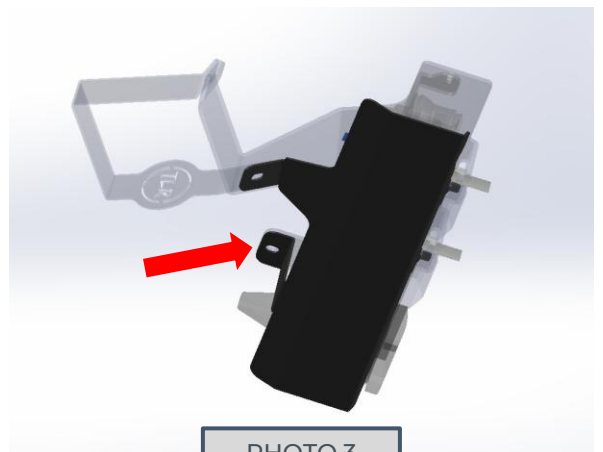


PHOTO 3



hello@tlrproducts.com.au
www.tlrproducts.com.au



instagram.com/tlrproducts
facebook.com/tlrproducts