



AERIAL BRACKET LEFT-HAND SIDE BONNET

TLR741409



SUITED TO:

TOYOTA HILUX N70 SERIES



PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 15 minutes.



Spanner
Socket Set

FITTING KIT	
QUANTITY	PART
1	TLR741409 – Mounting Bracket
2	M8 x 25mm Hex Head Bolt ZP
2	M8 Spring Washers ZP
2	M8 x 18 x 1.9mm Flat Washer ZP
2	Cable Tie 150 mm

NOTE:


This Aerial Bracket is designed to mount to the left-hand side rear section of the bonnet.





FITTING INSTRUCTIONS

1. We recommend applying masking tape along the rear edge of the bonnet to protect against scratching.
2. Remove the 2x M8 bonnet mounting bolts.
NOTE: ensure to hold the bonnet securely, we recommend the help of a second person to support the bonnet.
3. Place the TLR Products mounting bracket over the mounting holes and Install the 2 x M8 bolts, Spring Washers and Flat Washers.
4. Ensure the TLR Products bracket has adequate clearance around the bonnet before securing into place.
5. Remove Masking Tape to finalise installation.

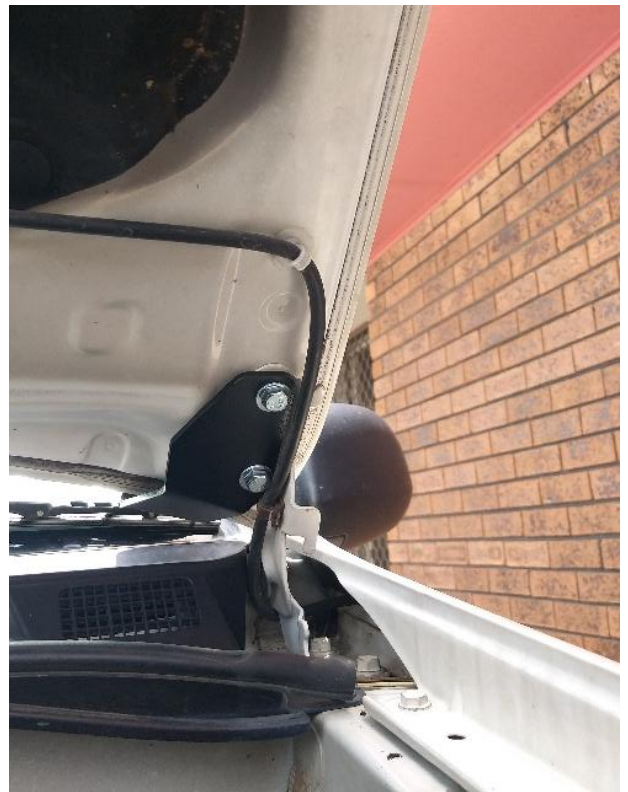

hello@tlrproducts.com.au
www.tlrproducts.com.au



instagram.com/tlrproducts
facebook.com/tlrproducts