



DEVICE MOUNT

TLR744016



SUITED TO:

**FORD RANGER PX SERIES/ FORD EVEREST UA SERIES
DRIVER SIDE GRAB HANDLE**



PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 15 minutes.



Socket Set
Screwdriver
Trim Removal Tool

FITTING KIT	
QUANTITY	PART
1	TLR744016-1 – Mounting Bracket
4	M5 x 16 SS Countersunk Phillips head
4	M5 x 16 SS Pan Phillips Head
4	M5 SS Nyloc Nut

NOTE:
This Mount is designed to suit all Ranger PX Series and Everest UA Series variants and locates on the driver's side grab handle.



Photo 1



FITTING INSTRUCTIONS

1. Install the chosen device mounting components using the hardware supplied.
See Photo 1 for suggested orientations.
2. Remove the driver side A-Pillar grab handle. This is done by releasing the rubber plugs to access the mounting bolts.
3. Once grab handle is removed, place the TLR Products Mounting Bracket over the Grab Handle Mounting Points and install the previously removed grab handle over the top.
Refer to photo 3
4. Ensure correct alignment of components and tighten mounting bolts to secure in place. **Refer to Photo 4**
5. Adjust device mount to suitable position.

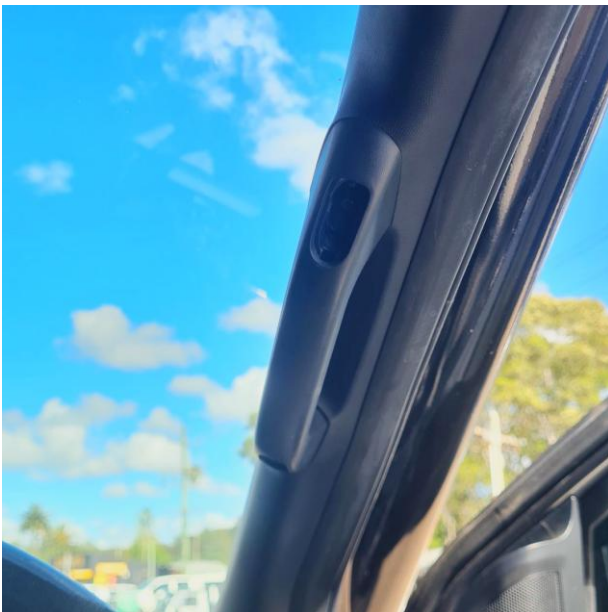


Photo 2



Photo 3



hello@tlrproducts.com.au
www.tlrproducts.com.au



instagram.com/tlrproducts
facebook.com/tlrproducts