


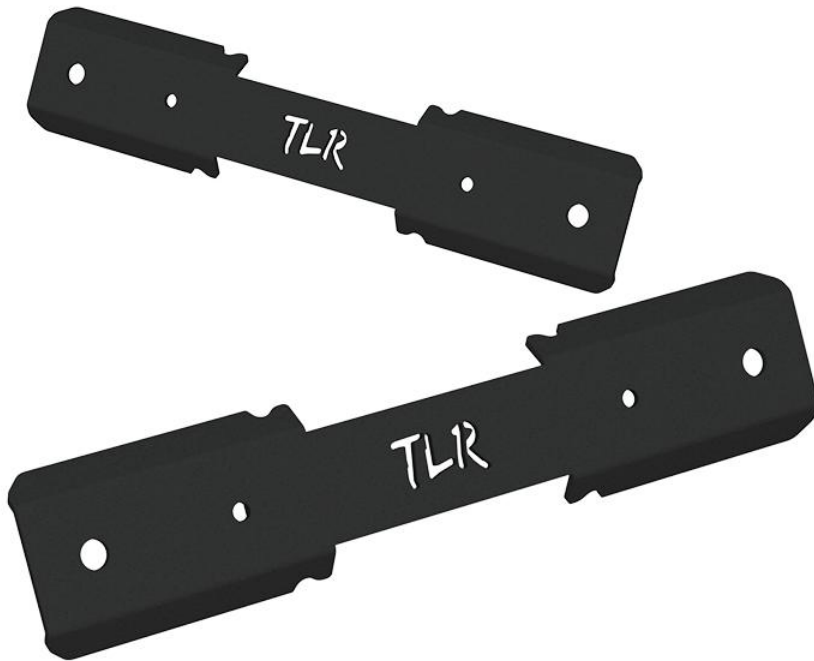

HD RECOVERY BOARD MOUNT

TLR940008



SUITED TO:

ARB BASE RACK EAST - WEST



PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 15 minutes.



Socket Set
Screwdriver
Allen Keys

FITTING KIT

QUANTITY	PART
2	TLR940008-4 Main Bracket Assembly
4	TLR940008-2 Clamp Bracket
4	M6x16 Button Head Socket Screw SS
4	M6 Nyloc Nut SS
8	M6x12.5 Flat Washer SS

NOTE:
This TLR Products bracket set is designed to mount in an East-West orientation on the ARB Base Rack. Suitable for TRED Pro/HD/GT/Compact, as well as MaxTrax Extreme/MKII/Lite/Mini.



Photo 1



FITTING INSTRUCTIONS

1. Install mounting pins to the TLR940008-1 Main Brackets using the hardware supplied with the pins.
NOTE: TRED pins will require the stepped washers to be used.
Photo 1.
2. Position the main brackets on the Base Rack in the desired location, correctly spaced to suit the recovery boards to be used. Install two TLR940008-2 Clamp Brackets to the underside of each Main Bracket using the supplied M6 hardware and securely tighten. **Photo 2.**
3. Install recovery boards and lock pins to complete the installation.
Photo 3.



Photo 2



Photo 3



hello@tlrproducts.com.au
www.tlrproducts.com.au



instagram.com/tlrproducts
facebook.com/tlrproducts