



HD RECOVERY BOARD MOUNT

TLR940011



SUITED TO:

**ARB BASE RACK EAST-WEST
FOLDING PIN**



PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 15 minutes.



Socket Set
Screwdriver
Allen Keys

FITTING KIT	
QUANTITY	PART
2	TLR940011-4 Main Bracket Assembly
4	TLR940008-2 Clamp Bracket
4	M6x16 Button Head Socket Screw SS
4	M6 Nyloc Nut SS
8	M6x12.5 Flat Washer SS

NOTE:

This TLR Products bracket set is designed to mount in an East-West orientation on the ARB Base Rack.
Pins can be folded down flat when not in use.
Suitable for TRED Pro/HD/GT/Compact, as well as MaxTrax Extreme/MKII/Lite/Mini.

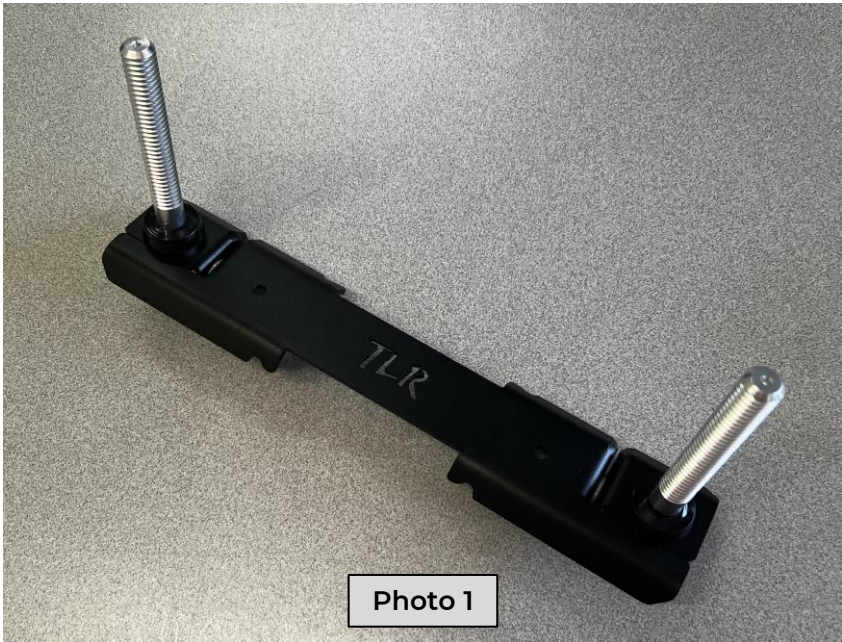


Photo 1



FITTING INSTRUCTIONS

1. Install mounting pins to the TLR940011-1 Main Brackets using the hardware supplied with the pins.

NOTE: TRED pins will require the stepped washers to be used.

Photo 1.



Photo 2

2. Position the main brackets on the Base Rack in the desired location correctly spaced to suit the boards to be used. Install two TLR940008-2 Clamp Brackets to the underside of each Main Bracket using the supplied M6 hardware and securely tighten.

Photo 2.



Photo 3

3. Install recovery boards and lock pins to complete the installation.

Photo 3.



hello@tlrproducts.com.au
www.tlrproducts.com.au



instagram.com/tlrproducts
facebook.com/tlrproducts