




HD RECOVERY BOARD MOUNT

TLR940012

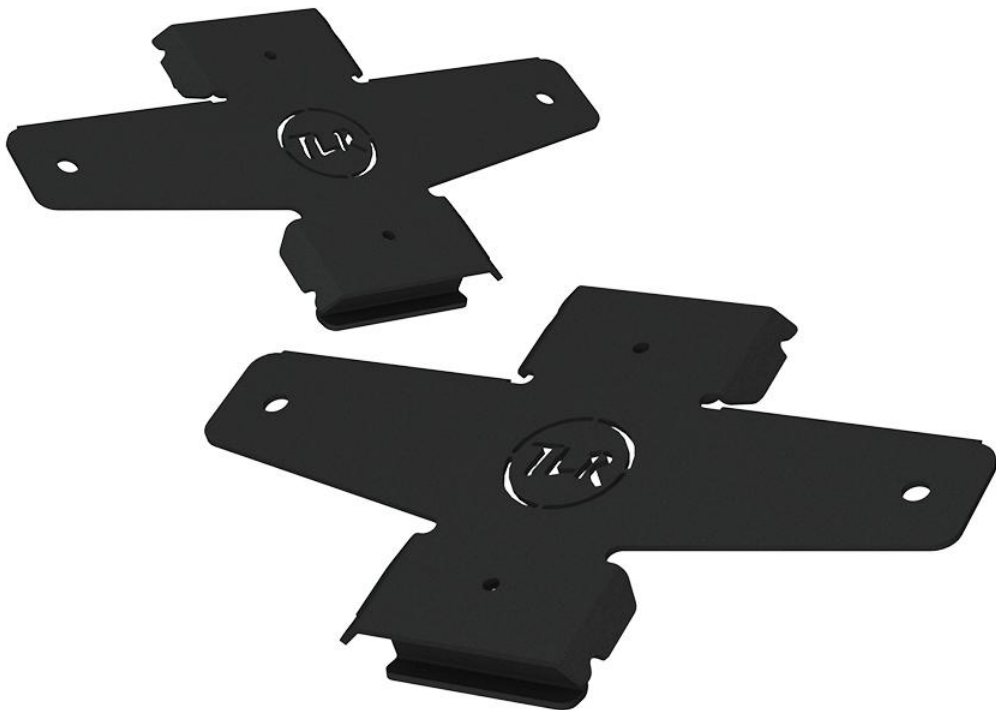

SUITED TO:

**ARB BASE RACK NORTH – SOUTH
FOLDING PINS**



PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 15 minutes.



Socket Set
Screwdriver
Allen Keys

FITTING KIT	
QUANTITY	PART
2	TLR940012-4 Main Bracket Assembly
4	TLR940012-2 Clamp Bracket
4	M6 x 16 mm Button Head Socket Screw SS
4	M6 Nyloc Nut SS
8	M6 x 12.5 mm Flat Washer SS



NOTE:
This TLR Products bracket set is designed to mount in a North-South orientation on the ARB Base Rack. Pins can be folded down flat when not in use. Suitable for TRED Pro/HD/GT, as well as MaxTrax Extreme/MKII/Lite.





FITTING INSTRUCTIONS

1. Install mounting pins to the TLR940012-1 Main Brackets using the hardware supplied with the pins.
NOTE: TRED pins will require the stepped washers to be used. **Photo 1.**
2. Position the main brackets on the Base Rack in the desired location and install two TLR940009-2 Clamp Brackets to each Main Bracket using the supplied M6 hardware and securely tighten. **Photo 2.**
NOTE: Position the brackets with Logos facing each other as per photo on previous page for correct pin spacing
3. Install recovery boards and lock pins to complete the installation.

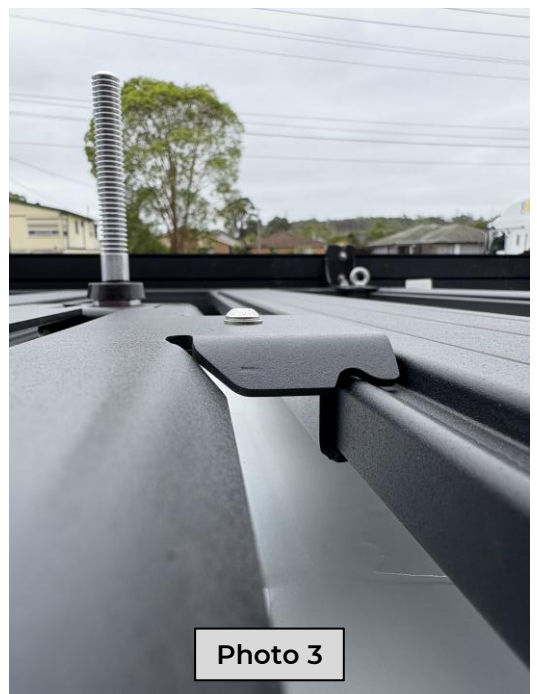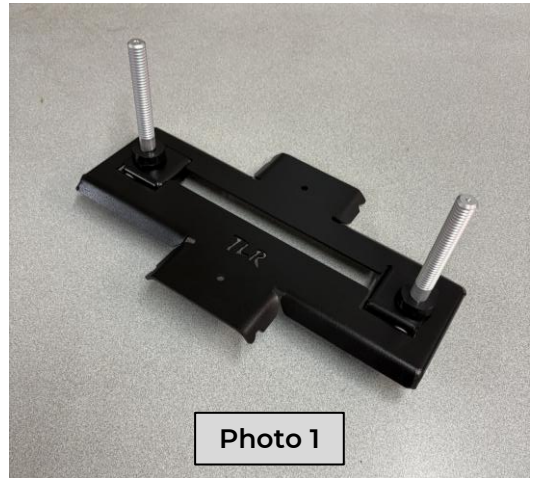

[instagram.com/tlrproducts](https://www.instagram.com/tlrproducts)
[facebook.com/tlrproducts](https://www.facebook.com/tlrproducts)



hello@tlrproducts.com.au
www.tlrproducts.com.au