




PROTECTION GUARD

TLR714602

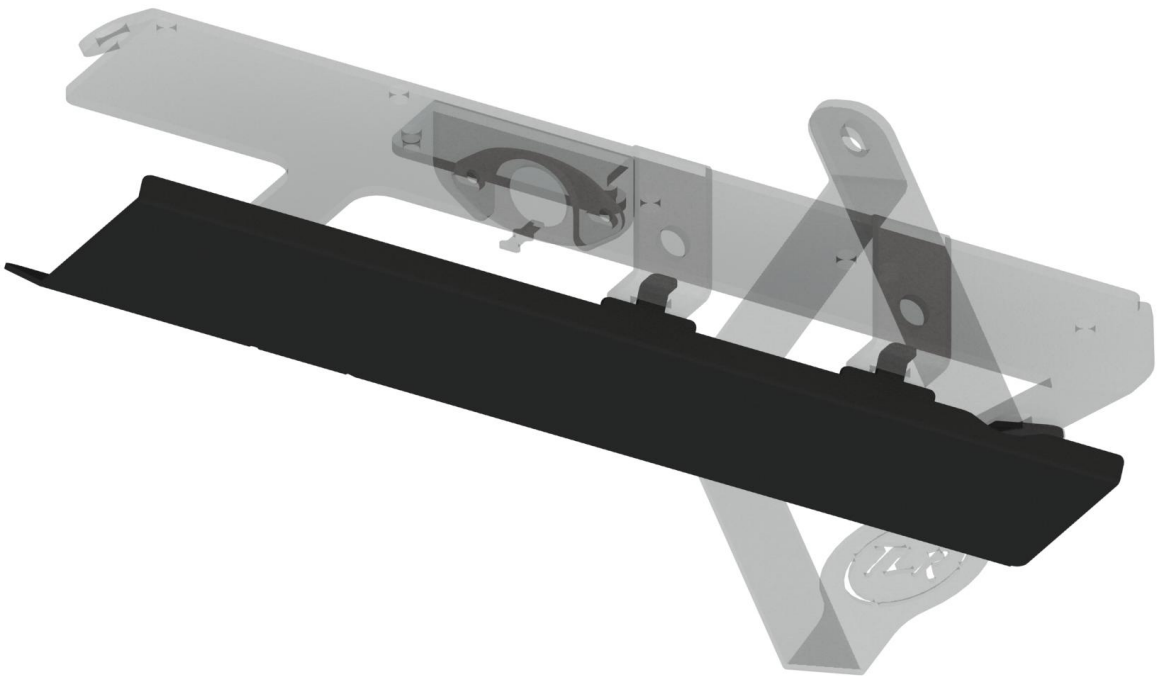

SUITED TO:

MITSUBISHI TRITON MV SERIES
NISSAN NAVARA D27 SERIES



PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 15 minutes.



Spanner
Socket Set
Allen Key
Torx Set

FITTING KIT

QUANTITY	PART
1	TLR714602 – Protection Guard
1	M6 x 12 mm Button Head Bolt Stainless Steel
1	M6 Nyloc Nuts Stainless steel
2	M6 x 12.5mm Flat Washer Stainless steel

NOTE:


This TLR Products Protection Guard requires installation of the of the Multi Trailer Plug Bracket “TLR714601”.





FITTING INSTRUCTIONS

1. It is required for the TLR Products Multi Trailer Plug bracket (TLR714601) to be installed to the vehicle prior.
2. Remove the M6 x 12mm button head bolt located on the lower side of the Trailer Plug Bracket clamping strap as per **Photo 1**.
3. Position the Protection Guard in place by slotting the front mounting tabs into the Trailer Plug Bracket as per **Photo 2**. Refit the M6 button head bolt previously removed through the Protection Guard, Trailer Plug Bracket and clamping strap.
4. Install the supplied M6 hardware through the Protection Guard and mounting tab located on the back of the mount, See **Photo 3**.

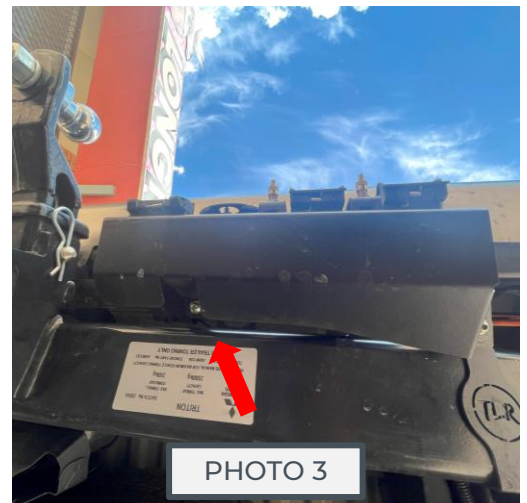

hello@tlrproducts.com.au
www.tlrproducts.com.au



instagram.com/tlrproducts
facebook.com/tlrproducts