



AERIAL + LIGHT BRACKET RIGHT-HAND SIDE BONNET

TLR741413



SUITED TO:

TOYOTA HILUX N90 SERIES



PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 15 minutes.



Spanner
Socket Set

FITTING KIT


QUANTITY	PART
1	TLR741413-1 Mounting Bracket
2	M8 x 25 Hex Head Bolt ZP
2	M8 Spring Washer ZP
2	M8 x 18 x 1.9 mm Flat Washer ZP
2	Cable Tie 150 mm





FITTING INSTRUCTIONS

1. We recommend applying masking tape along the rear edge of the bonnet to protect against damage during installation. **Photo 1.**
2. Remove the two RH bonnet hinge mounting bolts. *NOTE: Ensure to hold the bonnet securely once the bolts are removed. We recommend the assistance of a second person.* **Photo 2.**
3. Place the TLR Products bracket over the bonnet hinge and install the supplied M8 Bolts, Spring and Flat Washers. *NOTE: Ensure adequate clearance around bonnet before securing into place.* **Photo 3.**
4. Check clearance around plastic trim panel. Adjust the bracket inwards to provide clearance if necessary.
5. Install the Aerial and Light of choice and secure the cables to the edge of the bracket using the cable tie supplied to complete the installation.

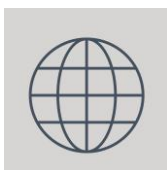

hello@tlrproducts.com.au
www.tlrproducts.com.au



instagram.com/tlrproducts
facebook.com/tlrproducts