



AERIAL BRACKET RIGHT-HAND SIDE BONNET

TLR742503



SUITED TO:

TOYOTA LANDCRUISER 300 SERIES



PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 15 minutes.



Spanner Socket Set

FITTING KIT	
QUANTITY	PART
1	TLR742503-1 – Mounting Bracket
2	Cable Tie 150 mm

NOTE:

This Aerial Bracket is designed to mount to the right-hand side rear section of the bonnet.

Occasionally the spring base of the Aerial may not be true, rotate the Aerial to achieve best possible alignment before tightening to secure in place.

Ditch Lights can be mounted to this bracket using the TLR740001 Adapter Washer set. (Sold Separately)






FITTING INSTRUCTIONS

1. It is recommended to place Masking Tape along the rear edge of the bonnet to protect against any damage during installation. **Photo 1.**
2. Remove the two bonnet mounting bolts from the hinge **Photo 2**, position the Aerial Mounting Bracket over the bonnet mounting holes and refit bonnet mounting bolts. **Photo 3.**
NOTE: It is recommended to have an assistant support the bonnet during the installation.
3. Once you have installed the bracket, ensure correct bonnet alignment.
4. Fit the Aerial or Light of choice to the Mounting Bracket and route the cable down the outside edge of the bracket and secure using the cable ties provided to prevent pinching.
5. Remove Masking Tape and confirm all hardware is secure to complete installation.



[instagram.com/tlrproducts](https://www.instagram.com/tlrproducts)
[facebook.com/tlrproducts](https://www.facebook.com/tlrproducts)

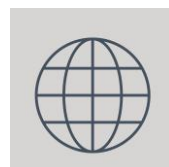

hello@tlrproducts.com.au
www.tlrproducts.com.au