




ELECTRICAL SOCKET MOUNT REAR CUP HOLDER

TLR812502

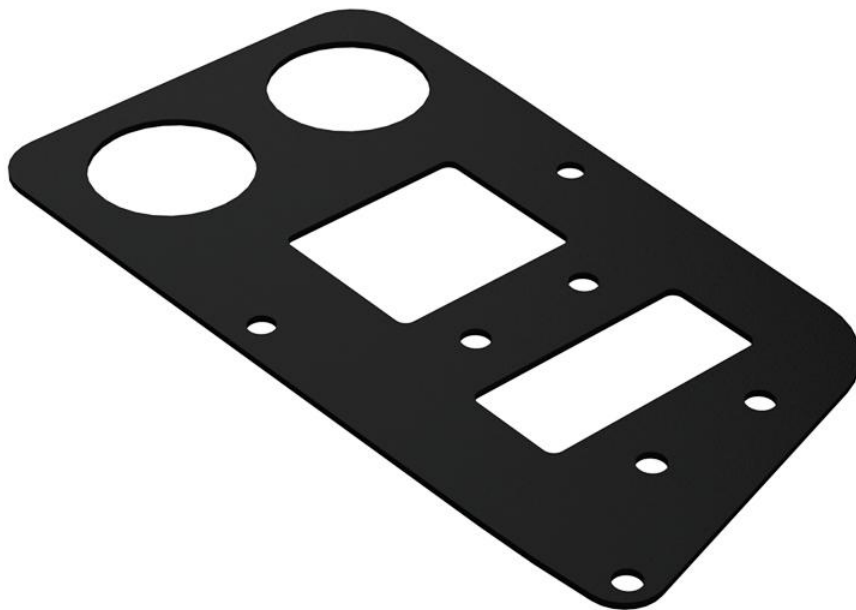

SUITED TO:

TOYOTA LANDCRUISER 300 SERIES



PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 30 minutes.



Spanner, Socket Set
Trim Removal Tool
Drill, Body Saw/ Hacksaw
Phillips Head Screwdriver

FITTING KIT

QUANTITY	PART
1	TLR812502-1 Main Bracket
2	TLR812102-2 Anderson Plug Bracket
3	#10 x ¾” Self Tapper Pan Phillips (BLACK)
4	M5 x 12 mm Pan Phillips (BLACK)
4	M3 x 20 mm Pan Phillips
2	M3 x 40 mm Pan Phillips
2	M5 x 25 mm Pan Phillips
4	M3 Nyloc Nut
6	M5 Nyloc Nut

NOTE:

This TLR Products Bracket is designed to fit seamlessly into the either side cupholder.



PHOTO 1



PHOTO 2


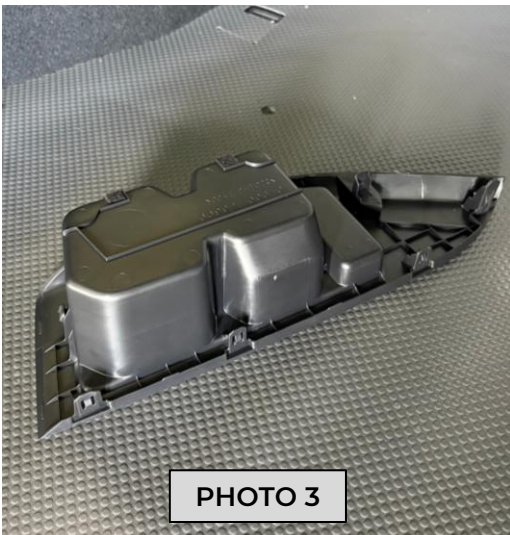


PHOTO 3



FITTING INSTRUCTIONS

1. Using a trim removal tool carefully remove the Cupholder trim panel from the chosen side of the vehicle. **Photo 1 and 2.**
2. Using a Body saw or Hack saw, cut the bottom off the cupholder. **Photo 3.**
3. Complete all necessary wiring in the rear inner guard area, leaving enough length to pass wires up through cup holder area.
4. Using the supplied M3 hardware attach the Anderson Plugs to the TLR812102-2 brackets. **Photo 4.**
5. Install CIG/USB sockets to the TLR812102-1 Main Bracket along with the Anderson Plug Brackets using the supplied M5 Black hardware. **Photo 5.**
6. Connect all wiring and position the assembly in the cup holder. Using a drill with Phillips Head bit install the two supplied Black Self Tapping screws by drilling them down into the plastic taking care not to over tighten. Install trim panel to complete the installation. **Photo 6.**

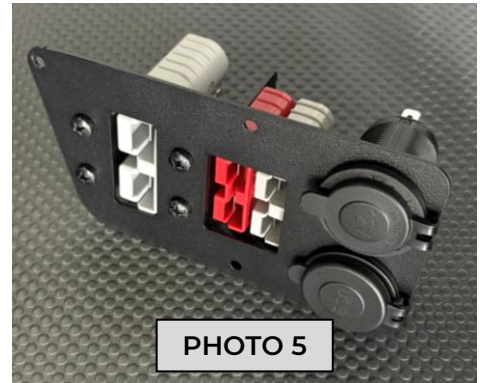

hello@tlrproducts.com.au
www.tlrproducts.com.au



instagram.com/tlrproducts
facebook.com/tlrproducts