




RECOVERY BOARD FOLDING MOUNT

TLR940014

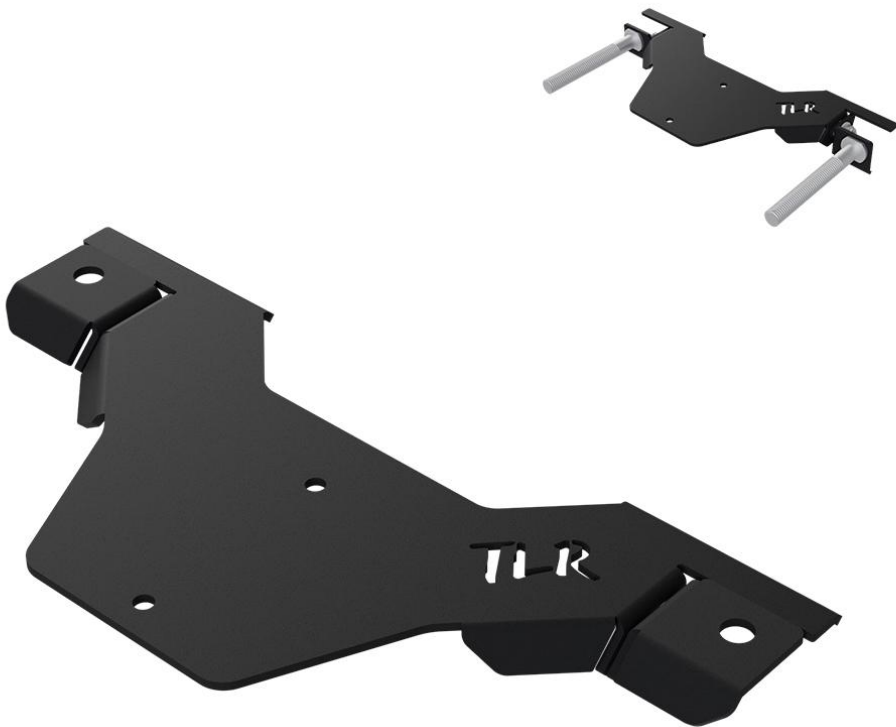

SUITED TO:

SLAT TYPE ROOF PLATFORMS



PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 15 minutes.



Spanner Socket Set
Allen Keys

FITTING KIT

QUANTITY	PART
2	TLR940014-4 Main Bracket Assembly
4	M6 x 16 mm Button Head Socket Screw SS
4	M6 Spring Washer SS
4	M6 x 12.5 mm Flat Washer SS
4	M6 Channel Nut

NOTE:

This TLR Products bracket set is designed to mount on Slat Type Roof Platforms such as Rhino Rack Pioneer in North-South orientation, Reconn in East-West orientation. Pins can be folded down flat when not in use.

Suitable for TRED Pro/HD/GT, as well as MaxTrax Extreme/MKII/Lite.

For Rhino Rack Pioneer 6 platforms a minimum of 4 Zwifloc channel nuts will be required.


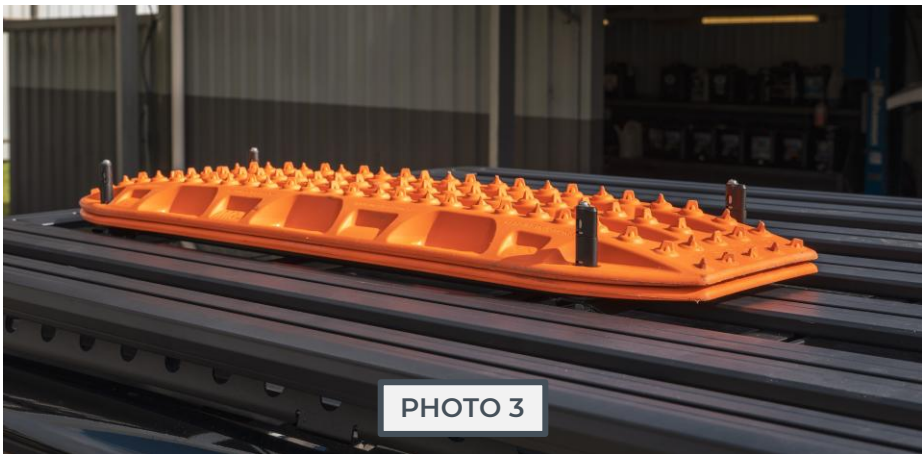


PHOTO 3



FITTING INSTRUCTIONS

1. Install mounting pins to the TLR940014-1 Main Brackets using the hardware supplied with the pins.
NOTE: TRED pins will require the stepped washers to be used.
Photo 1.
2. Position the main brackets on the rack in the desired location correctly spaced to suit the boards to be used. Install two M6 x 16 mm Socket Screws, Spring and Flat Washers to each bracket with channel nuts and securely tighten. **Photo 2.**
3. Install recovery boards and lock pins to complete the installation. **Photo 3.**

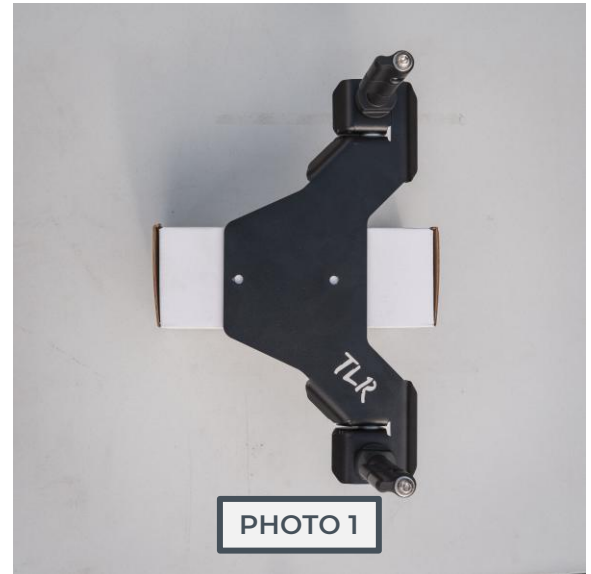

hello@tlrproducts.com.au
www.tlrproducts.com.au



instagram.com/tlrproducts
facebook.com/tlrproducts