



STARLINK MINI MOUNT

TLR940018



SUITED TO:

UNIVERSAL – MAGNETIC BASE



PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 10 minutes.



Spanner
Socket Set
Allen Keys

FITTING KIT	
QUANTITY	PART
1	TLR940010-1 Main Bracket
1	TLR940010-3 Cover Panel
1	TLR940010-4 Polycarbonate Protection Panel
4	M6x20 Button Head Socket Screw SS
4	M6 Spring Washer SS
8	M6 x 12 mm Flat Washer SS
4	M6 Nyloc Nut SS
8	6.4 x 18 x 1.6 mm Black TPE Flat Washer
4	66 x 8.5 Pot Magnet Rubber Cased - #3787B
1	12 x 4.8 x 800mm Foam Tape

NOTES:

If installing the TLR940023 Voltage Converter, complete fitment as per instructions before proceeding.





FITTING INSTRUCTIONS

1. Cut the supplied 12mm Foam Tape into eight 100mm lengths. Install around the opening on the inside of the TLR940010-3 Cover Panel leaving gaps to assist water drainage **as per Photo 1**.
2. Place 1 x Black TPE washer over the mounting stud of each Magnetic base.
3. Install the Magnetic bases to the mounting bracket as per **Photo 2 and 3** using another Black TPE washer, Flat Washer and Nyloc nut on the top surface.

NOTE: Tension the M6 nyloc nut until 2x thread have engaged beyond the Nyloc, be careful not to over tighten. See Photo 4.

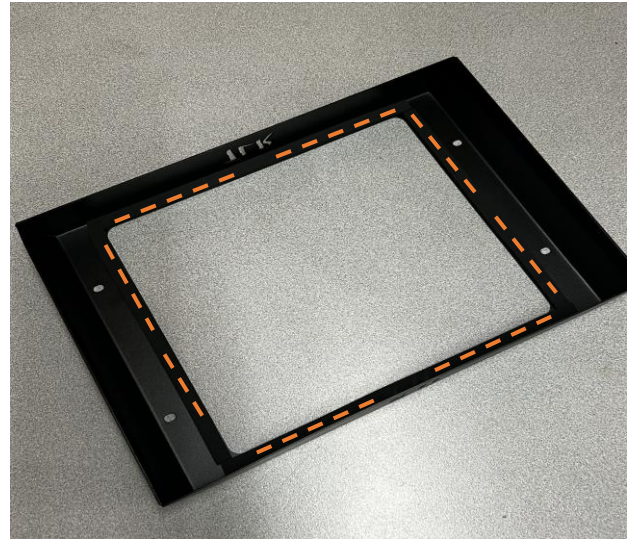


PHOTO 1

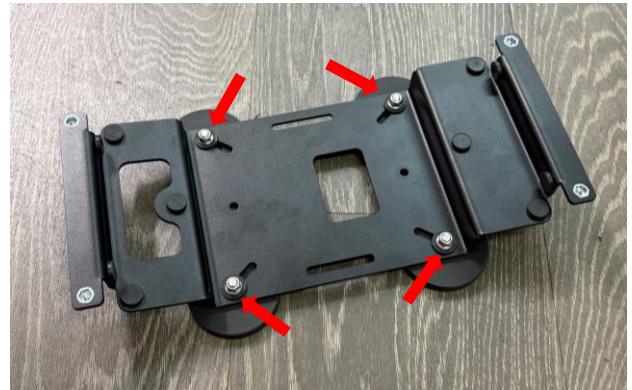


PHOTO 2



PHOTO 4



PHOTO 3



4. Install the Starlink Mini unit into the Main Bracket noting correct orientation as one side is tapered.
5. Remove protective film from both sides of the TLR940010-4 Polycarbonate Panel and position aligned on top of the Starlink unit with the peak pointing up. Install the Cover Panel using the remaining M6 hardware and securely tighten to complete the installation. **Photo 5.**



PHOTO 5



hello@tlrproducts.com.au
www.tlrproducts.com.au



instagram.com/tlrproducts
facebook.com/tlrproducts