ELECTRICAL ACCESSORY BRACKET

TLR814002

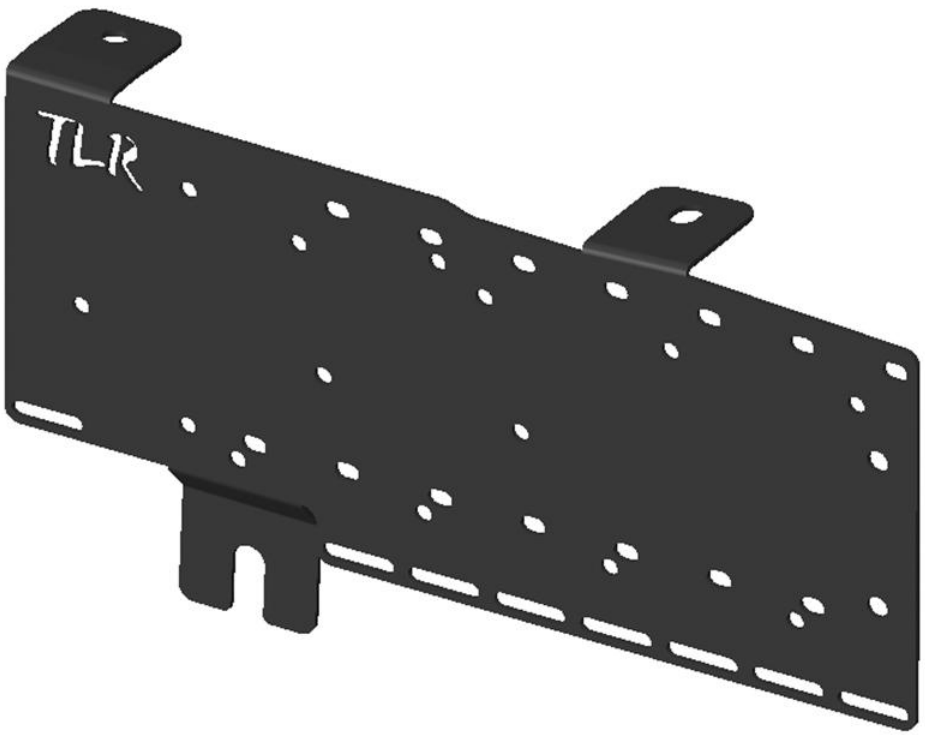

SUITED TO:

FORD RANGER SUPER DUTY

PRE-INSTALLATION

Read through this installation guide before proceeding.

Fitting time is approx. 10 minutes.

Spanner
Socket Set
Phillips Head Screwdrver

FITTING KIT	
QUANTITY	**PART**
1	TLR814002-1 Electrical Accessory Bracket
1	M6 x 16 mm Buttonhead Socket Screw SS
1	M6 Nyloc Nut SS
2	M6 x 18 x 1.6 mm Flat Washer SS

NOTE:
This TLR Products Bracket is designed to suit the Ford Ranger Super Duty and mounts on the longitudinal member located along side the OEM fuse box.

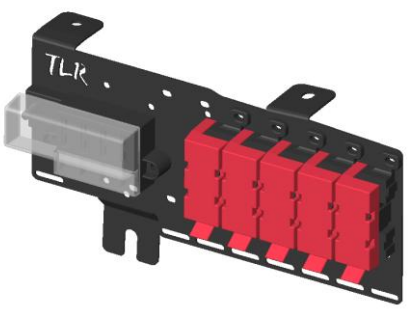
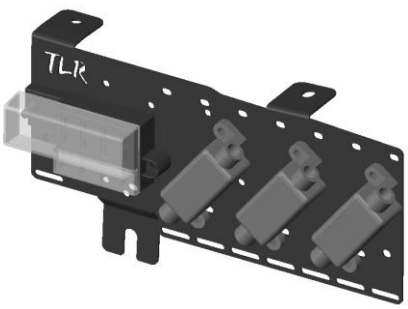
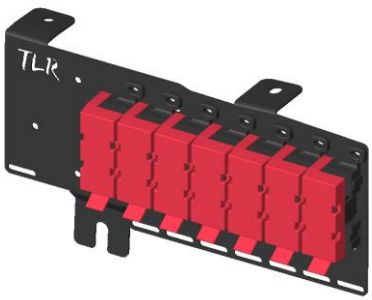
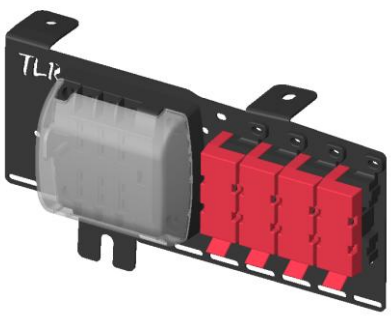
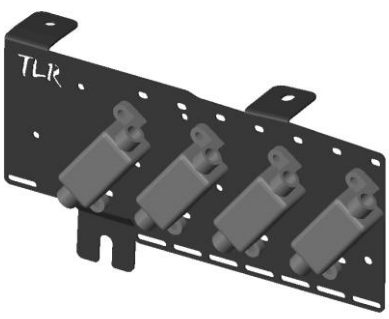
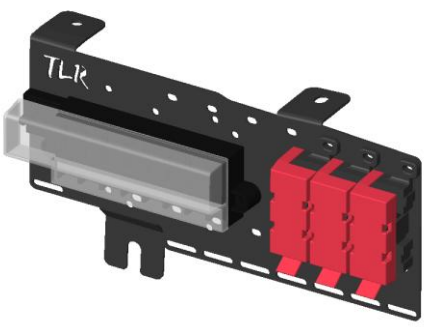

FITTING INSTRUCTIONS

1. Decide on which components and orientation you will use and assemble components onto TLR Products Bracket.
2. As per **Photo 1** remove the M6 bodywork bolt marked with the red arrow. Loosen the M8 bolt marked with the blue arrow approximately 2mm off the bodywork.
3. Install the TLR Products bracket assembly by sliding the lower mounting tab under the previously loosened M8 bolt. Install the supplied M6 Hardware to the rear upper mounting tab. Re-install the previously removed M6 bodywork bolt. **Photo 2.**
4. Securely tighten all hardware and finish all wiring to complete the installation.
   NOTE: Ensure adequate clearance on fuse box to allow removal of lid.

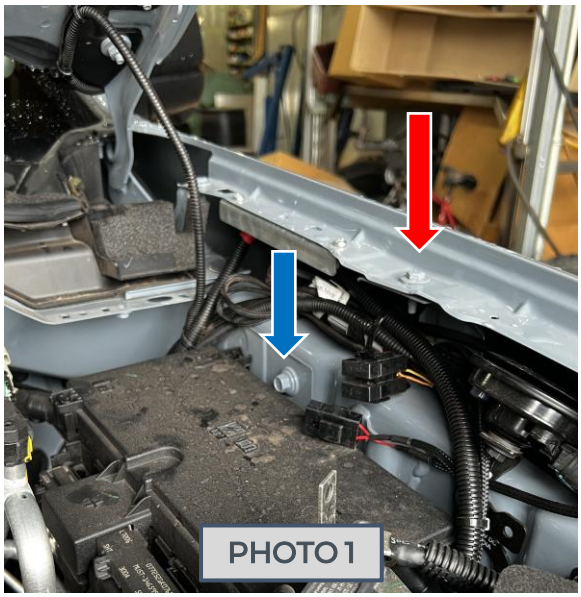
PHOTO 1


PHOTO 2

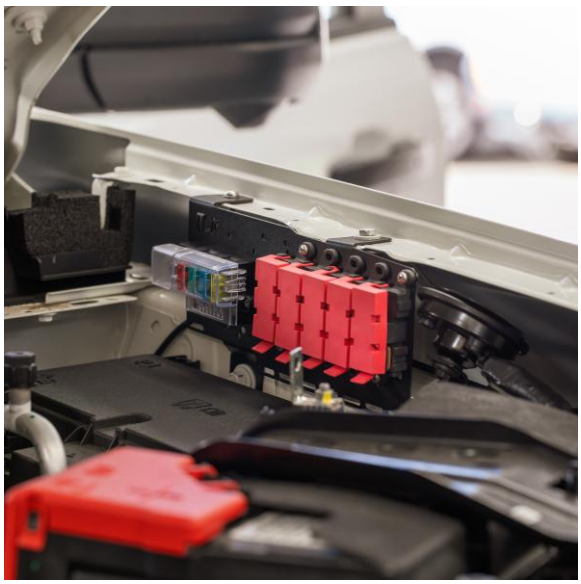

instagram.com/tlrproducts
facebook.com/tlrproducts

hello@tlrproducts.com.au
www.tlrpoducts.com.au